

NUSCAN 3500TB

User Guide

Revision History

Version	Description	Date
V1.0.0	Initial release.	September 22, 2017
V1.0.1	1. Added the Reset Timeout On/ Off features in Chapter 3. 2. Added the JAN Code for Magazines/ Books, Enable/Disable PDF417 ECI Output, Enable/Disable QR ECI Output, Enable/Disable Data Matrix ECI Output and Enable/Disable Chinese Sensible Code ECI Output features in Chapter 8. 3. Added the Windows 874 (Thai) feature. Note: Firmware version V1.00.103 or later is required for the new features above.	November 14, 2017
V1.0.2	Corrected "USB COM Port Emulation" to "USB CDC" in Chapter 2.	April 22, 2019

Table Of Contents

Revision History	-3-
Chapter 1 Getting Started.....	1
Introduction	1
About This Guide	1
Connecting EVK to PC	1
Barcode Scanning	2
Barcode Programming.....	2
Factory Defaults	3
Custom Defaults	3
Inquire Product Information	3
Chapter 2 Communication Interfaces	4
Power-Saving Mode	4
TTL-232 Interface	5
Baud Rate	6
Parity Check.....	7
Data Bit	7
Data Bit & Parity Check	8
Stop Bit	8
USB Interface (Optional)	9
USB Enumeration	9
USB HID Keyboard.....	9
Polling Rate	10
USB Country Keyboard Types	11
Beep on Unknown Character	13
Inter-Keystroke Delay.....	13
Convert Case	14
Emulate ALT+Keypad	15
Function Key Mapping.....	16
Emulate Numeric Keypad	17
Code Page.....	17
USB CDC.....	18

USB HID-POS.....	18
Introduction.....	18
Access the Engine with Your Program.....	19
Acquire Scanned Data	19
Send Data to the Engine	19
VID/PID.....	20
Chapter 3 Scan Mode.....	21
Batch Mode.....	21
Trigger Mode	22
Decode Session Timeout	22
Level Trigger/Pulse Trigger	23
Auto Sleep	23
Timeout between Decodes (Same Barcode)	24
Sense Mode.....	25
Decode Session Timeout	25
Image Stabilization Timeout.....	26
Timeout between Decodes.....	26
Timeout between Decodes (Same Barcode)	27
Sensitivity.....	28
Continuous Mode	29
Decode Session Timeout	29
Timeout between Decodes.....	29
Timeout between Decodes (Same Barcode)	30
Chapter 4 Scanning Preferences.....	31
Introduction.....	31
Decode Area.....	31
Whole Area Decoding.....	31
Specific Area Decoding	31
Specify Decoding Area.....	32
Chapter 5 Illumination & Aiming.....	34
Illumination.....	34
Aiming	35
Chapter 6 Beep & LED Notifications	36
Startup Beep.....	36

Good Read Beep for Non-programming Barcode	36
Beep Type	37
Beep Volume	37
Beep on Unknown Character	38
Good Read Beep for Programming Barcode	38
Good Read LED	38
Transmit Bad Read Message	39
Set Bad Read Message	39

Chapter 7 Prefix & Suffix 40

Global Settings	41
Enable/Disable All Prefixes/Suffixes	41
Prefix Sequences.....	41
Custom Prefix	42
Enable/Disable Custom Prefix.....	42
Set Custom Prefix.....	42
AIM ID Prefix.....	43
Code ID Prefix	43
Restore All Default Code IDs.....	43
Modify Code ID.....	44
Custom Suffix	47
Enable/Disable Custom Suffix	47
Set Custom Suffix	47
Terminating Character Suffix.....	48
Enable/Disable Terminating Character Suffix	48
Set Terminating Character Suffix	49

Chapter 8 Symbologies 50

Global Settings	50
Enable/Disable All Symbologies.....	50
Enable/Disable 1D Symbologies	50
Enable/Disable 2D Symbologies	50
Video Reverse	51
1D Symbologies	52
Code 128	52
Restore Factory Defaults.....	52
Enable/Disable Code 128	52

Set Length Range for Code 128.....	52
GS1-128 (UCC/EAN-128)	53
Restore Factory Defaults.....	53
Enable/Disable GS1-128.....	53
Set Length Range for GS1-128.....	53
AIM-128	54
Restore Factory Defaults.....	54
Enable/Disable AIM-128	54
Set Length Range for AIM-128.....	54
EAN-8	55
Restore Factory Defaults.....	55
Enable/Disable EAN-8.....	55
Transmit Check Character	55
Add-On Code	56
Add-On Code Required.....	57
EAN-8 Extension	57
EAN-13	58
Restore Factory Defaults.....	58
Enable/Disable EAN-13	58
Transmit Check Character	58
Add-On Code	59
Add-On Code Required.....	59
EAN-13 Beginning with 290 Add-On Code Required	60
EAN-13 Beginning with 378/379 Add-On Code Required	60
EAN-13 Beginning with 414/419 Add-On Code Required	61
EAN-13 Beginning with 434/439 Add-On Code Required	61
EAN-13 Beginning with 977 Add-On Code Required	62
EAN-13 Beginning with 978 Add-On Code Required	62
EAN-13 Beginning with 979 Add-On Code Required	63
ISSN.....	64
Restore Factory Defaults.....	64
Enable/Disable ISSN.....	64
Add-On Code	65
Add-On Code Required.....	65
ISBN.....	66
Restore Factory Default	66

Enable/Disable ISBN.....	66
Set ISBN Format	66
Add-On Code	67
Add-On Code Required.....	67
UPC-E.....	68
Restore Factory Defaults.....	68
Enable/Disable UPC-E	68
Transmit Check Character	68
Add-On Code	69
Add-On Code Required.....	69
Transmit System Character "0"	70
UPC-E Extension.....	70
UPC-A.....	71
Restore Factory Defaults.....	71
Enable/Disable UPC-A	71
Transmit Check Character	71
Add-On Code	72
Add-On Code Required.....	72
Transmit Preamble Character	73
Interleaved 2 of 5	74
Restore Factory Defaults.....	74
Enable/Disable Interleaved 2 of 5	74
Set Length Range for Interleaved 2 of 5	74
Check Character Verification	75
ITF-14	76
ITF-6	77
Matrix 2 of 5	78
Restore Factory Defaults.....	78
Enable/Disable Matrix 2 of 5	78
Set Length Range for Matrix 2 of 5	78
Check Character Verification	79
Industrial 2 of 5	80
Restore Factory Defaults.....	80
Enable/Disable Industrial 2 of 5	80
Set Length Range for Industrial 2 of 5	80
Check Character Verification	81

Standard 2 of 5 (IATA 2 of 5)	82
Restore Factory Defaults.....	82
Enable/Disable Standard 25.....	82
Set Length Range for Standard 25.....	82
Check Character Verification	83
Code 39	84
Restore Factory Defaults.....	84
Enable/Disable Code 39.....	84
Transmit Start/Stop Character	84
Set Length Range for Code 39	85
Check Character Verification	85
Enable/Disable Code 39 Full ASCII	85
Enable/Disable Code 32.....	86
Code 32 Prefix.....	86
Transmit Code 32 Check Character.....	87
Transmit Code 32 Start/Stop Character.....	87
Codabar	88
Restore Factory Defaults.....	88
Enable/Disable Codabar	88
Set Length Range for Codabar	88
Check Character Verification	89
Transmit Start/Stop Character.....	89
Start/Stop Character Format.....	90
Code 93	91
Restore Factory Defaults.....	91
Enable/Disable Code 93.....	91
Set Length Range for Code 93.....	91
Check Character Verification	92
GS1-Databar (RSS).....	93
Restore Factory Defaults.....	93
Enable/Disable GS1 Databar	93
Transmit Application Identifier "01"	93
Code 11	94
Restore Factory Defaults.....	94
Enable/Disable Code 11.....	94
Set Length Range for Code 11.....	94

Transmit Check Character	95
Check Character Verification	95
Plessey	96
Restore Factory Defaults.....	96
Enable/Disable Plessey.....	96
Set Length Range for Plessey.....	96
Check Character Verification	97
MSI-Plessey.....	98
Restore Factory Defaults.....	98
Enable/Disable MSI-Plessey.....	98
Set Length Range for MSI-Plessey	98
Transmit Check Character	99
Check Character Verification	99
JAN.....	100
JAN Code for Magazines	100
JAN Code for Books	101
2D Symbolologies	102
PDF 417.....	102
Restore Factory Defaults.....	102
Enable/Disable PDF 417	102
Set Length Range for PDF 417	102
PDF 417 Twin Code	103
Character Encoding.....	103
Enable/Disable PDF417 ECI Output.....	104
QR Code	105
Restore Factory Defaults.....	105
Enable/Disable QR Code	105
Set Length Range for QR Code	105
Micro QR	105
QR Twin Code	106
Character Encoding.....	106
Enable/Disable QR ECI Output.....	107
Data Matrix.....	108
Restore Factory Defaults.....	108
Enable/Disable Data Matrix.....	108
Set Length Range for Data Matrix	108

Rectangular Barcode.....	109
Mirror Image	109
Data Matrix Twin Code	110
Character Encoding.....	110
Enable/Disable Data Matrix ECI Output.....	111
Chinese Sensible Code	112
Restore Factory Defaults.....	112
Enable/Disable Chinese Sensible Code	112
Set Length Range for Chinese Sensible Code	112
Enable/Disable Chinese Sensible Code ECI Output	113
Chapter 9 Image Control.....	114
Image Flipping	114
Flip	115
Flip Vertically	115
Flip Horizontally	115
Chapter 10 Batch Programming	116
Introduction.....	116
Create a Batch Command	117
Create a Batch Barcode	118
Use Batch Barcode.....	119
Chapter 11 Troubleshooting	120
FAQ.....	120
Appendix	122
Appendix 1: Factory Defaults Table	122
Appendix 2: AIM ID Table.....	131
Appendix 3: Code ID Table	133
Appendix 4: ASCII Table	134
Appendix 5: Parameter Programming Examples	138
a. Program the Decode Session Timeout.....	138
b. Program the Time Period from Idle to Sleep.....	138
c. Program the Image Stabilization Timeout	138
d. Program the Timeout between Decodes (Same Barcode)	139
e. Program the Threshold Value of Illumination Change	139

f. Program the Timeout between Decodes.....	139
g. Program the Decoding Area	140
h. Program the Custom Prefix/Suffix	140
i. Program the Terminating Character Suffix	141
j. Program the Code ID	141
k. Program the NGR Message	141
l. Program the Code Page	142
m. Program the Length Range (Maximum/Minimum Lengths) for a Symbology	142
n. Program the Custom Inter-keystroke Delay	143
o. Program the engine to get proper output for Russian encoded with Windows 1251	143
p. Program the engine to get proper output for Russian encoded with UTF-8	143
Appendix 6: Digit Barcodes	144
Appendix 7: Save/Cancel Barcodes.....	146
Appendix 8: ASCII Function Key Mapping Table	147
Appendix 9: Code Pages List	149

Chapter 1 Getting Started

Introduction

The NLS-EM3085-M OEM scan engines (hereinafter referred to as “the EM3085-M” or “the engine”), armed with the Newland patented **UIMG**, a computerized image recognition system, bring about a new era of 2D barcode scan engines.

The EM3085-Ms’ 2D barcode decoder chip ingeniously blends **UIMG** technology and advanced chip design & manufacturing, which significantly simplifies application design and delivers superior performance and solid reliability with low power consumption.

The EM3085-Ms support all mainstream 1D and standard 2D barcode symbologies (e.g., PDF417, QR Code M1/M2/Micro and Data Matrix) as well as GS1-DataBar™(RSS) (Limited/Stacked/Expanded versions). It can read barcodes on virtually any medium - paper, plastic card, mobile phones and LCD displays.

This compact, lightweight engine fits easily into even the most space-constrained equipment such as data collectors, meter readers, ticket validators and PDAs.

About This Guide

This guide provides programming instructions for the EM3085-M. Users can configure the EM3085-M by scanning the programming barcodes included in this manual.

The EM3085-M has been properly configured for most applications and can be put into use without further configuration. Users may check the **Factory Defaults Table** in **Appendix** for reference. Throughout the manual, asterisks (**) indicate factory default values.

Connecting EVK to PC

The EVK tool is provided to assist users in application development for the EM3085-M. You can connect the EVK to PC via a USB connection or an RS-232 connection. In case of USB connection, a driver is required if PC wants to communicate with EM3085-M and receive decoded data through virtual serial port.

Barcode Scanning

Powered by area-imaging technology and Newland patented **UIMG** technology, the EM3085-M features fast scanning and accurate decoding. Barcodes rotated at any angle can still be read with ease. When scanning a barcode, simply center the aiming beam or pattern projected by the EM3085-M over the barcode.

Barcode Programming

Scanning the **Enter Setup** barcode can enable the engine to enter the setup mode. Then you can scan a number of programming barcodes to configure your engine. To exit the setup mode, scan the **Exit Setup** barcode.

If the engine has exited the setup mode, only some special programming barcodes, such as the **Enter Setup** barcode and **Restore All Factory Defaults** barcode, can be read.



0006010

Enter Setup



0006000

**** Exit Setup**

Programming barcode data can be transmitted to the Host. Scan the appropriate barcode below to enable or disable the transmission of programming barcode data (i.e. the characters under programming barcode) to the Host.

Restarting the engine will automatically disable the transmissison of programming barcode data to the Host.



0002010

Transmit Programming Barcode Data



0002000

**** Do Not Transmit Programming Barcode Data**

Factory Defaults

Scanning the following barcode can restore the engine to the factory defaults. See **Appendix 1: Factory Defaults Table** for more information.

Note: Use this feature with discretion.



Restore All Factory Defaults

Custom Defaults

Custom defaults make it possible to save the frequently-used settings on the engine.

Scanning the **Save as Custom Defaults** barcode can save the current settings as custom defaults. Once custom default settings are stored, they can be recovered at any time by scanning the **Restore All Custom Defaults** barcode.

Custom defaults are stored in the non-volatile memory. Restoring the engine to the factory defaults will not remove the custom defaults from the engine.



Save as Custom Defaults



Restore All Custom Defaults

Inquire Product Information

You can scan the barcode below to inquire the engine information (such as firmware version, model number, serial number, manufacture date). The result will be sent to the Host.



Inquire Product Information



0006010
Enter Setup

Chapter 2 Communication Interfaces

The EM3085-M provides a TTL-232 interface and a USB interface (optional) to communicate with the host device. The host device can receive scanned data and send commands to control the engine or to access/alter the configuration information of the engine via the interface.

Power-Saving Mode

By default, the engine adopts the Normal Mode which supports both TTL-232 and USB. The Power-Saving Mode is designed to conserve power. However, you can only use TTL-232 communication in the Power-Saving Mode.



**** Normal Mode**
(TTL-232 & USB supported)



Power-Saving Mode
(TTL-232 supported)



0006000
**** Exit Setup**



0006010

Enter Setup

TTL-232 Interface

Serial communication interface is usually used when connecting the engine to a host device (like PC, POS). However, to ensure smooth communication and accuracy of data, you need to set communication parameters (including baud rate, parity check, data bit and stop bit) to match the host device.

The serial communication interface provided by the engine is based on TTL-level signals. TTL-232 can be used for most application architectures. For those requiring RS-232, an external conversion circuit is needed. The conversion circuit is available only to some models.



1100000

**** Serial Communication**

Default serial communication parameters are listed below. Make sure all parameters match the host requirements.

Parameter	Factory Default
Serial Communication	Standard TTL-232
Baud Rate	9600
Parity Check	None
Data Bits	8
Stop Bits	1
Hardware Flow Control	None



0006000

**** Exit Setup**



0006010
Enter Setup

Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the baud rate to match the Host requirements.



0100030

**** 9600**



0100000

1200



0100050

19200



0100010

2400



0100060

38400



0100020

4800



0100070

57600



0100040

14400



0100080

115200



0006000
**** Exit Setup**



0006010

Enter Setup

Parity Check

When the number of data bits is set to 7, you can only select either **Even Parity** or **Odd Parity**. The **None** option will be regarded as **Even Parity** in this case.



0101000

** None



0101010

Even Parity



0101020

Odd Parity

Data Bit

When the number of data bits is set to 7, you can only select either **Even Parity** or **Odd Parity**.



0103020

7 Data Bits



0103030

** 8 Data Bits



0006000

** Exit Setup



0006010
Enter Setup

Data Bit & Parity Check



0105010

Data Bits/Even Parity



0105020

7 Data Bits/Odd Parity



0105030

** 8 Data Bits/ No Parity



0105040

Data Bits/Even Parity



0105050

8 Data Bits/Odd Parity

Stop Bit



0102000

** 1 Stop Bit



0102010

2 Stop Bits



0006000
** Exit Setup



0006010
Enter Setup

USB Interface (Optional)

USB Enumeration

If the engine is connected to the Host via a USB connection, the engine will be enumerated using S/N or “00000000” after power-up. **Enumeration using S/N** enables the Host to distinguish even between engines of same model. **Enumeration using “00000000”** disables the Host from distinguishing between engines of same model.

Driver installation is required for each USB device distinguished from others by the Host in the process of enumeration.



1100210
Enumeration Using S/N



1100200
**** Enumeration Using “00000000”**

USB HID Keyboard

When you connect the engine to the Host via a USB connection, you can enable the **USB HID-KBW** feature by scanning the barcode below. Then engine’s transmission will be simulated as USB keyboard input. The Host receives keystrokes on the virtual keyboard. It works on a Plug and Play basis and no driver is required.



1100020
USB HID-Keybaord



0006000
**** Exit Setup**



0006010
Enter Setup

Polling Rate

This parameter specifies the polling rate for a USB keyboard. If the Host drops characters, change the polling rate to a bigger value.



1103170

**** 1ms**



1103171

2ms



1103172

3ms



1103173

4ms



1103174

5ms



1103175

6ms



1103176

7ms



1103177

8ms



1103178

9ms



1103179

10ms



0006000
**** Exit Setup**



0006010

Enter Setup

USB Country Keyboard Types

Keyboard layouts vary from country to country. The default setting is U.S. keyboard.



1103001

**** U.S.**



1103002

Japan



1103003

Denmark



1103004

Finland



1103005

France



1103006

Turkey_F



1103007

Italy



1103008

Norway



0006000

**** Exit Setup**



0006010
Enter Setup



1103222
Spain



1103226
Turkey_Q



1103227
UK



1103209
Austria, Germany



1103202
Belgium



1103220
Russia



1103223
Sweden



1103218
Portugal

Note: To program the engine to get proper output for Russian encoded with Windows 1251 or UTF-8 (PDF417/QR Code/Data Matrix), see **Appendix 5**.



0006000
**** Exit Setup**



0006010
Enter Setup

Beep on Unknown Character

Due to the differences in keyboard layouts, some characters contained in barcode data may be unavailable on the selected keyboard. As a result, the engine fails to transmit the unknown characters.

Scan the appropriate barcode below to enable or disable the emission of beep when an unknown character is detected.



1103031

Beep on Unknown Character



1103030

**** Do Not Beep on Unknown Character**

Inter-Keystroke Delay

This parameter specifies the delay between emulated keystrokes. It is programmable in 5ms increments from 0ms to 75ms. Single-digit values must have a leading zero. To learn how to program custom delay, see **Appendix 5**. The default setting is 10ms.



1103050

No Delay



1103051

Short Delay (20ms)



1103052

Long Delay (40ms)



1103053

Custom Delay



0006000
**** Exit Setup**



0006010
Enter Setup

Convert Case

Scan the appropriate barcode below to convert barcode data to your desired case.



1103040

**** No Case Conversion**



1103043

Invert Upper and Lower Case Characters



1103041

Convert All to Upper Case



1103042

Convert All to Lower Case

Example: When the **Convert All to Lower Case** feature is enabled, barcode data “AbC” is transmitted as “abc”.



0006000
**** Exit Setup**



0006010
Enter Setup

Emulate ALT+Keypad

This feature allows any ASCII character (0x00 - 0xFF) to be sent over the numeric keypad no matter which keyboard type is selected. Since sending a character involves multiple keystroke emulations, this method appears less efficient.

The following options are available:

- **Disable:** No ASCII character is sent in the ALT+Keypad way.
- **Mode 1:** ASCII characters not supported by the selected keyboard type but falling into 0x20~0xFF are sent in the ALT+Keypad way.
- **Mode 2:** ASCII characters falling into 0x20~0xFF are sent in the ALT+Keypad way.
- **Mode 3:** All ASCII characters (0x00~0xFF) are sent in the ALT+Keypad way.

Note: In the event of a conflict between **Function Key Mapping** and **Mode 3, Function Key Mapping** shall govern.



1103060

**** Disable**



1103061

Mode 1



1103062

Mode 2



1103063

Mode 3

Example: Supposing US keyboard is selected, barcode data "ADF" (65/208/70) is sent as below:

(1) **Mode 1** is enabled:

"A" -- Keystroke "A"

"D" -- "ALT Make" + "208" + "ALT Break"

"F" -- Keystroke "F"

(2) **Mode 3** is enabled:

"A" -- "ALT Make" + "065" + "ALT Break"

"D" -- "ALT Make" + "208" + "ALT Break"

"F" -- "ALT Make" + "070" + "ALT Break"



0006000
**** Exit Setup**



0006010
Enter Setup

Function Key Mapping

When Function Key Mapping is enabled, function characters (0x00 - 0x1F) are sent as ASCII sequences over the keypad. For more information, see **Appendix 8: ASCII Function Key Mapping Table**.



1103140

Enable Function Key Mapping



1103130

**** Disable Function Key Mapping**

Example: Barcode data 0x16

 T	Enable Function Key Mapping	Ctrl+V
	Disable Function Key Mapping	F1



0006000
**** Exit Setup**



0006010

Enter Setup

Emulate Numeric Keypad

When this feature is disabled, sending barcode data is emulated as keystroke(s) on main keyboard.

To enable this feature, scan the **Emulate Numeric Keypad** barcode. Sending a number (0-9) is emulated as keystroke(s) on numeric keypad, whereas sending other characters like “+”, “_”, “*”, “/” and “.” is still emulated as keystrokes on main keyboard.



1103110

**** Do Not Emulate Numeric Keypad**



1103120

Emulate Numeric Keypad

Code Page

In order to support more international characters, the **Code Page** programming feature is provided. This feature is only effective when ASCII characters are sent in the ALT+Keypad way. Programming a code page requires scanning numeric barcode (For more information, see **Appendix 9: Code Pages List**). The default code page is Windows 1252 (Latin I). To learn how to program it, see **Appendix 5**.



1103180

Set the Code Page



0006000

**** Exit Setup**



0006010
Enter Setup

USB CDC

If you connect the engine to the Host via a USB connection, the **USB CDC** feature allows the Host to receive data in the way as a serial port does. A driver is required for this feature.



1100060
USB CDC

USB HID-POS

Introduction

The USB HID-POS interface is recommended for new application programs. It can send up to 56 characters in a single USB report and appears more efficient than keyboard emulation.

Features:

- ≥ HID based, no custom driver required.
- ≥ Way more efficient in communication than keyboard emulation and traditional RS-232 interface.

Note: USB HID-POS does not require a custom driver. However, a HID interface on Windows 98 does. All HID interfaces employ standard driver provided by the operating system. Use defaults when installing the driver.



1100080
USB HID-POS



0006000
**** Exit Setup**



0006010
Enter Setup

Access the Engine with Your Program

Use CreateFile to access the engine as a HID device and then use ReadFile to deliver the scanned data to the application program. Use WriteFile to send data to the engine.

For detailed information about USB and HID interfaces, go to www.USB.org.

Acquire Scanned Data

After scanning and decoding a barcode, the engine sends the following input report:

	Bit							
Byte	7	6	5	4	3	2	1	0
0	Report ID = 0x02							
1	Length of the barcode							
2-57	Decoded data (1-56)							
58-60	AIM ID							
61-62	Reserved							
63	-	-	-	-	-	-	-	Decoded Data Continued

Send Data to the Engine

This output report is used to send data to the device. All programming commands can be used.

	Bit							
Byte	7	6	5	4	3	2	1	0
0	Report ID = 0x04							
1	Length of the output data							
2-63	Output data (1-62)							



0006000
** Exit Setup



0006010
Enter Setup

VID/PID

USB uses VID (Vendor ID) and PID (Product ID) to identify and locate a device. The VID is assigned by USB Implementers Forum. Newland's vendor ID is 1EAB (Hex). A PID is assigned to each interface.

Product	Interface	PID (Hex)	PID (Dec)
EM3085-M	USB HID-KBW	1A03	6659
	USB CDC	1A06	6662
	USB HID-POS	1A10	6672



0006000
** Exit Setup



Chapter 3 Scan Mode

Batch Mode

If the Batch Mode is enabled, driving the TRIG pin on the host interface connector low activates a round of multiple decode sessions. This round of multiple scans continues until the active trigger signal is no longer present. Rereading the same barcode is not allowed if it was decoded previously in the same round. For good read, the engine transmits decoded data via communication port. To activate another round of multiple scans, the Host needs to first negate the trigger, waits 20ms or longer and then drive the TRIG pin low.



Batch Mode





0006010
Enter Setup

Trigger Mode

If the Trigger Mode is enabled, driving the TRIG pin on the host interface connector low activates a decode session. The session continues until the barcode is decoded or decode session timeout expires or the active trigger signal is no longer present. For good read, the engine transmits decoded data via communication port. To activate another session, the Host needs to first negate the trigger, waits 20ms or longer and then drive the TRIG pin low.



0302000
**** Trigger Mode**

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1ms increments from 100ms to 3,600,000ms. When it is set to 0, the timeout is infinite. The default setting is 3,000ms. To learn how to program this parameter, see **Appendix 5**.



0313000
Decode Session Timeout



0006000
**** Exit Setup**



0006010

Enter Setup

Level Trigger/Pulse Trigger

Level Trigger: Decode session is activated and continued by constant active trigger signal. The decode session ends once the barcode is decoded or decode session timeout expires.

Pulse Trigger: Decode session is activated by electric pulse of trigger signal. The decode session continues until the barcode is decoded or decode session timeout expires.



0313090

**** Level Trigger**



0313091

Pulse Trigger

Auto Sleep

Auto Sleep allows the engine in the Trigger Mode to automatically enter the sleep or low power mode if no operation or communication is performed for a time period (user programmable). When the engine is in the sleep mode, receiving trigger signal or communication from the Host can awake the engine. The engine returns to full operation within 100ms.



0313060

**** Enable Auto Sleep**



0313070

Disable Auto Sleep

The parameter below specifies how long the engine remains idle (no operation or communication occurs) before it is put into sleep mode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 500ms. To learn how to program this parameter, see **Appendix 5**.



0313050

Time Period from Idle to Sleep



0006000

**** Exit Setup**



0006010
Enter Setup

Timeout between Decodes (Same Barcode)

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

Disable Timeout between Decodes (Same Barcode): Allow the engine to re-read same barcode.

Enable Timeout between Decodes (Same Barcode) & Reset Timeout Off: Do not allow the engine to re-read same barcode before the timeout between decodes (same barcode) expires.

Enable Timeout between Decodes (Same Barcode) & Reset Timeout On: Do not allow the engine to re-read same barcode.



0313161

**** Disable Timeout between Decodes (Same Barcode)**



0313171

Enable Timeout between Decodes (Same Barcode)



0313200

**** Reset Timeout Off**



0313201

Reset Timeout On

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.

To learn how to program this parameter, see **Appendix 5**.



0313010

Timeout between Decodes (Same Barcode)



0006000
**** Exit Setup**



0006010

Enter Setup

Sense Mode

If the Sense Mode is enabled, the engine activates a decode session every time it detects a change in ambient illumination. The decode session continues until the barcode is decoded or the decode session timeout expires.

Driving the TRIG pin on the host interface connector low can also activate a decode session. The decode session continues until the active trigger signal is no longer present or the barcode is decoded or the decode session timeout expires. The trigger signal needs to be negated before the engine is able to monitor ambient illumination again.



0302010

Sense Mode

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. If the timeout expires or the barcode is decoded, the engine goes back to monitoring ambient illumination. It is programmable in 1ms increments from 100ms to 3,600,000ms. When it is set to 0, the timeout is infinite. The default setting is 3,000ms. To learn how to program this parameter, see **Appendix 5**.



0313000

Decode Session Timeout



0006000

** Exit Setup



0006010
Enter Setup

Image Stabilization Timeout

This parameter defines the amount of time that the engine waits for the image to stabilize to a point that it can be decoded with more accuracy. It is programmable in 1ms increments from 0ms to 1,600ms. The default setting is 500ms. To learn how to program this parameter, see **Appendix 5**.



0313120
Image Stabilization Timeout

Timeout between Decodes

This parameter sets the timeout between decode sessions. When a decode session ends, next session will not happen until the timeout between decodes expires. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,000ms. To learn how to program this parameter, see **Appendix 5**.



0313040
Timeout between Decodes



0006000
** Exit Setup



Timeout between Decodes (Same Barcode)

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

Disable Timeout between Decodes (Same Barcode): Allow the engine to re-read same barcode.

Enable Timeout between Decodes (Same Barcode) & Reset Timeout Off: Do not allow the engine to re-read same barcode before the timeout between decodes (same barcode) expires.

Enable Timeout between Decodes (Same Barcode) & Reset Timeout On: Do not allow the engine to re-read same barcode.



**** Disable Timeout between Decodes (Same Barcode)**



Enable Timeout between Decodes (Same Barcode)



**** Reset Timeout Off**



Reset Timeout On

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.

To learn how to program this parameter, see **Appendix 5**.



Timeout between Decodes (Same Barcode)





0006010
Enter Setup

Sensitivity

Sensitivity specifies the degree of acuteness of the engine's response to changes in ambient illumination. The higher the sensitivity, the lower requirement in illumination change to trigger the engine. You can select an appropriate degree of sensitivity that fits the ambient environment.



0312010
Medium Sensitivity



0312000
Low Sensitivity



0312020
High Sensitivity



0312030
Enhanced Sensitivity

If the above four options fail to meet your needs, you may program the threshold value of illumination change.

Illumination changes that reach or surpass the predefined threshold value will cause the engine to start a decode session. The lower the threshold value, the greater the sensitivity of the engine. The default threshold value is 2.

To learn how to program this parameter, see **Appendix 5**.



0312040
Threshold Value of Illumination Change (1-16)



0006000
**** Exit Setup**



Continuous Mode

This mode enables the engine to scan/capture, decode and transmit over and over again.

When the engine is operating in Continuous Mode, barcode reading can be suspended/resumed through control over the trigger signal. When barcode reading is in progress, negating the trigger signal after having maintained it for 30ms or longer will suspend barcode reading; when barcode reading is suspended, performing the same control over the trigger signal will resume barcode reading.



Continuous Mode

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable in 1ms increments from 100ms to 3,600,000ms. When it is set to 0, the timeout is infinite. The default setting is 3,000ms. To learn how to program this parameter, see **Appendix 5**.



Decode Session Timeout

Timeout between Decodes

This parameter sets the timeout between decode sessions. When a decode session ends, next session will not happen until the timeout between decodes expires. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,000ms. To learn how to program this parameter, see **Appendix 5**.



Timeout between Decodes





0006010
Enter Setup

Timeout between Decodes (Same Barcode)

Timeout between Decodes (Same Barcode) can avoid undesired rereading of same barcode in a given period of time.

Disable Timeout between Decodes (Same Barcode): Allow the engine to re-read same barcode.

Enable Timeout between Decodes (Same Barcode) & Reset Timeout Off: Do not allow the engine to re-read same barcode before the timeout between decodes (same barcode) expires.

Enable Timeout between Decodes (Same Barcode) & Reset Timeout On: Do not allow the engine to re-read same barcode.



0313160

**** Disable Timeout between Decodes (Same Barcode)**



0313170

Enable Timeout between Decodes (Same Barcode)



0313200

**** Reset Timeout Off**



0313201

Reset Timeout On

The following parameter sets the timeout between decodes for same barcode. It is programmable in 1ms increments from 0ms to 65,535ms. The default setting is 1,500ms.

To learn how to program this parameter, see **Appendix 5**.



0313010

Timeout between Decodes (Same Barcode)



0006000
**** Exit Setup**



0006010
Enter Setup

Chapter 4 Scanning Preferences

Introduction

This chapter contains information as to how to adapt your engine to various applications with preference setting. For instance, to narrow the field of view of the engine to make sure it reads only those barcodes intended by the user.

Decode Area

Whole Area Decoding

When this option is enabled, the engine attempts to decode barcode(s) within its field of view, from the center to the periphery, and transmits the barcode that has been first decoded.



**** Whole Area Decoding**

Specific Area Decoding

The engine attempts to read barcode(s) within a specified decoding area and transmits the barcode that has been first decoded. This option allows the engine to narrow its field of view to make sure it reads only those barcodes intended by the user. For instance, if multiple barcodes are placed closely together, specific area decoding in conjunction with appropriate pre-defined decoding area will insure that only the desired barcode is read.



Specific Area Decoding



0006000
**** Exit Setup**




0006010
Enter Setup

Specify Decoding Area

If **Specific Area Decoding** is enabled, the engine only reads barcodes that intersect the predefined decoding area.

The default decoding area is an area of 40% top, 60% bottom, 40% left and 60% right of the engine's field of view, as shown in the figure below. In the following example, the white box is the decoding area. Since Barcode 1 passes through the decoding area, it will be read. Barcode 2 does not pass through the decoding area, so it will not be read.

You can define the decoding area using the **Top of Decoding Area**, **Bottom of Decoding Area**, **Left of Decoding Area** and **Right of Decoding Area** barcodes as well as numeric barcode(s) that represent(s) a desired percentage (0-100). To learn how to program decoding area, see **Appendix 5**.

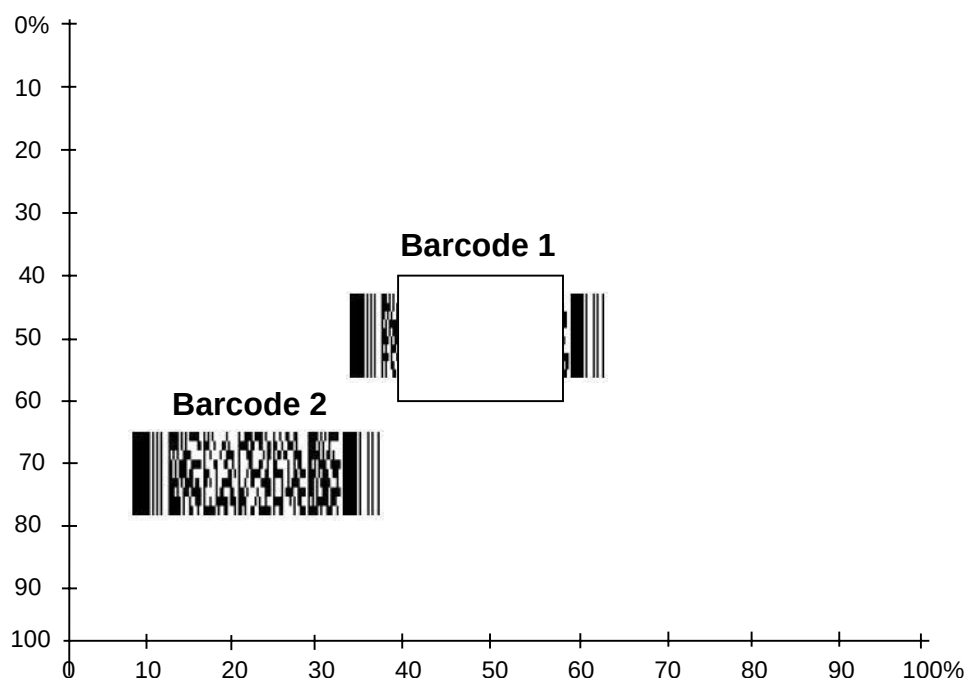

0006000
** Exit Setup



0006010

Enter Setup



0322030

Top of Decoding Area



0322040

Bottom of Decoding Area



0322050

Left of Decoding Area



0322060

Right of Decoding Area



0006000

**** Exit Setup**



0006010
Enter Setup

Chapter 5 Illumination & Aiming

Illumination

A couple of illumination options are provided to improve the lighting conditions during every image capture:

Normal: Illumination LEDs are turned on during image capture.

Always ON: Illumination LEDs keep ON after the engine is powered on.

OFF: Illumination LEDs are OFF all the time.



0200000
** Normal



0200020
OFF



0200010
Always ON



0006000
** Exit Setup



0006010
Enter Setup

Aiming

When scanning/capturing image, the engine projects an aiming pattern which allows positioning the target barcode within its field of view and thus makes decoding easier.

Normal: The engine projects an aiming pattern only during barcode scanning/capture.

Always ON: Aiming pattern is constantly ON after the engine is powered on.

OFF: Aiming pattern is OFF all the time.



0201000

**** Normal**



0201020

OFF



0201010

Always ON



0006000
**** Exit Setup**



0006010
Enter Setup

Chapter 6 Beep & LED Notifications

Startup Beep

If startup beep is enabled, the engine will beep after being turned on.



0204001

**** Enable Startup Beep**



0204000

Disable Startup Beep

Good Read Beep for Non-programming Barcode

The engine can provide a PWM output to an external driver circuit to drive a beeper after decoding a non-programming barcode. Scan the appropriate barcode below to enable or disable the emission of good read beep. Beep type (frequency) and volume are also user programmable.



0203010

**** Good Read Beep On for Non-programming Barcode**



0203000

Good Read Beep Off for Non-programming Barcode



0006000
**** Exit Setup**



0006010

Enter Setup

Beep Type



0203020

Type 1



0203022

** Type 3



0203021

Type 2

Beep Volume



0203030

** Loud



0203032

Low



0203031

Medium



0006000

** Exit Setup



0006010
Enter Setup

Beep on Unknown Character

Due to the differences in keyboard layouts, some characters contained in barcode data may be unavailable on the selected keyboard (USB HID-KBW). As a result, the engine fails to transmit the unknown characters.

Scan the appropriate barcode below to enable or disable the emission of beep when an unknown character is detected.



1103031

Beep on Unknown Character



1103030

**** Do Not Beep on Unknown Character**

Good Read Beep for Programming Barcode



0203041

**** Good Read Beep On for Programming Barcode**



0203040

Good Read Beep Off for Programming Barcode

Good Read LED



0206011

**** Good Read LED ON**



0206010

Good Read LED OFF



0006000
**** Exit Setup**



0006010
Enter Setup

Transmit Bad Read Message

Scan a barcode below to select whether or not to transmit a user-defined bad read message when a barcode is not decoded.



0320010

Transmit Bad Read Message



0320000

**** Do Not Transmit Bad Read Message**

Set Bad Read Message

To set a bad read message, scan the **Set Bad Read Message** barcode and the numeric barcodes representing the hexadecimal values of desired character(s) and then scan the **Save** barcode.

A bad read message can contain 0-7 characters.



0320020

Set Bad Read Message



0006000
**** Exit Setup**



0006010
Enter Setup

Chapter 7 Prefix & Suffix

In many applications, barcode data needs to be edited and distinguished from one another.

Usually AIM ID and Code ID can be used as identifiers, but in some special cases customized prefix and terminating character suffix like Carriage Return or Line Feed can also be the alternatives.

Data formatting may include:

- ✧ Append AIM ID/Code ID/custom prefix before the decoded data
- ✧ Append custom suffix after the decoded data
- ✧ Append terminating character to the end of the data

The following formats can be used when editing barcode data:

- ✧ [Code ID] + [Custom Prefix] + [AIM ID] + [DATA] + [Custom Suffix] + [Terminating Character]
- ✧ [Custom Prefix] + [Code ID] + [AIM ID] + [DATA] + [Custom Suffix] + [Terminating Character]



0006000
** Exit Setup



0006010
Enter Setup

Global Settings

Enable/Disable All Prefixes/Suffixes

Disable All Prefixes/Suffixes: Transmit barcode data with no prefix/suffix.

Enable All Prefixes/Suffixes: Allow user to append Code ID prefix, AIM ID prefix, custom prefix/suffix and terminating character to the barcode data before the transmission.



Enable All Prefixes/Suffixes



Disable All Prefixes/Suffixes

Prefix Sequences



Code ID+Custom Prefix+AIM ID



** Custom Prefix+Code ID+AIM ID



0006000
** Exit Setup



0006010
Enter Setup

Custom Prefix

Enable/Disable Custom Prefix

If custom prefix is enabled, you are allowed to append to the data a user-defined prefix that cannot exceed 11 characters.



0305010

Enable Custom Prefix



0305000

** Disable Custom Prefix

Set Custom Prefix

To set a custom prefix, scan the **Set Custom Prefix** barcode and the numeric barcodes representing the hexadecimal values of a desired prefix and then scan the **Save** barcode. Refer to **Appendix 4: ASCII Table** for hexadecimal values of characters. To learn how to program this parameter, see **Appendix 5**.

Note: A custom prefix cannot exceed 11 characters.



0300000

Set Custom Prefix



0006000
** Exit Setup



AIM ID Prefix

AIM (Automatic Identification Manufacturers) IDs and ISO/IEC 15424 standards define symbology identifiers and data carrier identifiers. (For the details, see the **“Appendix 2: AIM ID Table”** section). If AIM ID prefix is enabled, the engine will add the symbology identifier before the scanned data after decoding.



Enable AIM ID Prefix



**** Disable AIM ID Prefix**

Code ID Prefix

Code ID can also be used to identify barcode type. Unlike AIM ID, Code ID is user programmable. Code ID can only consist of one or two English letters.



Enable Code ID Prefix



**** Disable Code ID Prefix**

Restore All Default Code IDs

For the information of default Code IDs, see the **“Appendix 3: Code ID Table”** section.



Restore All Default Code IDs





0006010
Enter Setup

Modify Code ID

Code ID of each symbology can be programmed separately. To learn how to program this parameter, see **Appendix 5**.



Modify PDF417 Code ID



Modify Data Matrix Code ID



Modify QR Code ID



Modify Chinese Sensible Code ID



Modify Code 128 Code ID



Modify GS1-128 Code ID



Modify AIM-128 Code ID



Modify EAN-8 Code ID



0006000
**** Exit Setup**



0006010

Enter Setup



0004050

Modify EAN-13 Code ID



0004060

Modify UPC-E Code ID



0004070

Modify UPC-A Code ID



0004240

Modify ISBN Code ID



0004230

Modify ISSN Code ID



0004130

Modify Code 39 Code ID



0004170

Modify Code 93 Code ID



0004080

Modify Interleaved 2 of 5 Code ID



0004090

Modify ITF-14 Code ID



0004100

Modify ITF-6 Code ID



0006000

** Exit Setup



0006010
Enter Setup



0004150

Modify Codabar Code ID



0004250

Modify Industrial 25 Code ID



0004260

Modify Standard 25 Code ID



0004110

Modify Matrix 25 Code ID



0004220

Modify COOP 25 Code ID



0004280

Modify Code 11 Code ID



0004270

Modify Plessey Code ID



0004290

Modify MSI/Plessey Code ID



0004310

Modify GS1 Databar Code ID



0006000
**** Exit Setup**



0006010

Enter Setup

Custom Suffix

Enable/Disable Custom Suffix

If custom suffix is enabled, you are allowed to append to the data a user-defined suffix that cannot exceed 11 characters.



0306010

Enable Custom Suffix



0306000

** Disable Custom Suffix

Set Custom Suffix

To set a custom suffix, scan the **Set Custom Suffix** barcode and the numeric barcodes representing the hexadecimal values of a desired suffix and then scan the **Save** barcode. Refer to **Appendix 4: ASCII Table** for hexadecimal values of characters. To learn how to program this parameter, see **Appendix 5**.

Note: A custom suffix cannot exceed 11 characters.



0301000

Set Custom Suffix



0006000

** Exit Setup



0006010
Enter Setup

Terminating Character Suffix

A terminating character can be used to mark the end of data, which means nothing can be added after it.

A terminating character suffix can contain 1-7 characters.

Enable/Disable Terminating Character Suffix

To enable/disable terminating character suffix, scan the appropriate barcode below.



0309010

**** Enable Terminating Character Suffix**



0309000

Disable Terminating Character Suffix



0006000
**** Exit Setup**



Set Terminating Character Suffix

The engine provides a shortcut for setting the terminating character suffix to CR (0x0D) or CRLF (0x0D,0x0A) and enabling it by scanning the appropriate barcode below.



**** Terminating Character CR (0x0D)**



Terminating Character CRLF (0x0D,0x0A)

To set a terminating character suffix, scan the **Set Terminating Character Suffix** barcode and the numeric barcodes representing the hexadecimal value of a desired terminating character and then scan the **Save** barcode. Refer to **Appendix 4: ASCII Table** for hexadecimal values of terminating characters. To learn how to program this parameter, see **Appendix 5**.

Note: A terminating character suffix cannot exceed 7 characters.



Set Terminating Character Suffix





Chapter 8 Symbologies

Global Settings

Enable/Disable All Symbologies

If the **Disable All Symbologies** feature is enabled, the engine will not be able to read any non-programming barcodes except the programming barcodes.



Enable All Symbologies



Disable All Symbologies

Enable/Disable 1D Symbologies

If the **Disable 1D Symbologies** feature is enabled, the engine will not be able to read any 1D barcodes.



Enable 1D Symbologies



Disable 1D Symbologies

Enable/Disable 2D Symbologies

If the **Disable 2D Symbologies** feature is enabled, the engine will not be able to read any 2D barcodes.



Enable 2D Symbologies



Disable 2D Symbologies



Video Reverse

The **Video Reverse** feature only applies to 2D barcodes.


Regular barcode: Dark image on a bright background.

Inverse barcode: Bright image on a dark background.

The examples of regular barcode and inverse barcode are shown below.



Regular Barcode

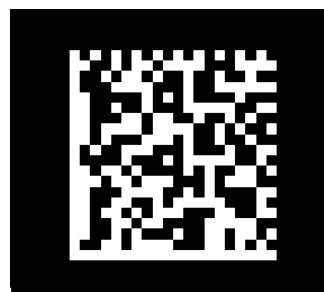

Inverse Barcode

Video Reverse allows the engine to read barcodes that are inverted.

Video Reverse ON: Read both regular barcodes and inverse barcodes.

Video Reverse OFF: Read regular barcodes only.

The engine shows a slight decrease in scanning speed when Video Reverse is ON.



Video Reverse ON



** Video Reverse OFF



0006010
Enter Setup

1D Symbolologies

Code 128

Restore Factory Defaults



0400000

Restore the Factory Defaults of Code 128

Enable/Disable Code 128



0400020

**** Enable Code 128**



0400010

Disable Code 128

Set Length Range for Code 128



0400030

Set the Minimum Length



0400040

Set the Maximum Length



0006000
**** Exit Setup**



0006010
Enter Setup

GS1-128 (UCC/EAN-128)

Restore Factory Defaults



0412000

Restore the Factory Defaults of GS1-128

Enable/Disable GS1-128



0412020

** Enable GS1-128



0412010

Disable GS1-128

Set Length Range for GS1-128



0412030

Set the Minimum Length



0412040

Set the Maximum Length



0006000
** Exit Setup



0006010
Enter Setup

AIM-128

Restore Factory Defaults



0423000

Restore the Factory Defaults of AIM-128

Enable/Disable AIM-128



0423020

**** Enable AIM-128**



0423010

Disable AIM-128

Set Length Range for AIM-128



0423030

Set the Minimum Length



0423040

Set the Maximum Length



0006000
**** Exit Setup**



0006010
Enter Setup

EAN-8

Restore Factory Defaults



0401000

Restore the Factory Defaults of EAN-8

Enable/Disable EAN-8



0401020

**** Enable EAN-8**



0401010

Disable EAN-8

Transmit Check Character

EAN-8 is 8 digits in length with the last one as its check character used to verify the integrity of the data.



0401040

**** Transmit EAN-8 Check Character**



0401030

Do Not Transmit EAN-8 Check Character



0006000
**** Exit Setup**



0006010
Enter Setup

Add-On Code

An EAN-8 barcode can be augmented with a two-digit or five-digit add-on code to form a new one. In the examples below, the part surrounded by blue dotted line is an EAN-8 barcode while the part circled by red dotted line is add-on code.



0401060
Enable 2-Digit Add-On Code



0401050
** Disable 2-Digit Add-On Code



0401080
Enable 5-Digit Add-On Code



0401070
** Disable 5-Digit Add-On Code

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of EAN-8 barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes EAN-8 and ignores the add-on code when presented with an EAN-8 plus add-on barcode. It can also decode EAN-8 barcodes without add-on codes.



0006000
** Exit Setup



0006010
Enter Setup

Add-On Code Required

When **EAN-8 Add-On Code Required** is selected, the engine will only read EAN-8 barcodes that contain add-on codes.



EAN-8 Add-On Code Required



**** EAN-8 Add-On Code Not Required**

EAN-8 Extension

Disable EAN-8 Zero Extend: Transmit EAN-8 barcodes as is.

Enable EAN-8 Zero Extend: Add five leading zeros to decoded EAN-8 barcodes to extend to 13 digits.



Enable EAN-8 Zero Extend



**** Disable EAN-8 Zero Extend**



0006000
**** Exit Setup**



0006010
Enter Setup

EAN-13

Restore Factory Defaults



0402000

Restore the Factory Defaults of EAN-13

Enable/Disable EAN-13



0402020

**** Enable EAN-13**



0402010

Disable EAN-13

Transmit Check Character



0402040

**** Transmit EAN-13 Check Character**



0402030

Do Not Transmit EAN-13 Check Character



0006000
**** Exit Setup**



Add-On Code

An EAN-13 barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



Enable 2-Digit Add-On Code



**** Disable 2-Digit Add-On Code**



Enable 5-Digit Add-On Code



**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of EAN-13 barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes EAN-13 and ignores the add-on code when presented with an EAN-13 plus add-on barcode. It can also decode EAN-13 barcodes without add-on codes.

Add-On Code Required

When **EAN-13 Add-On Code Required** is selected, the engine will only read EAN-13 barcodes that contain add-on codes.



EAN-13 Add-On Code Required



**** EAN-13 Add-On Code Not Required**





0006010
Enter Setup

EAN-13 Beginning with 290 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “290”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with “290” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



0402110

**** Do Not Require Add-On Code**



0402120

Require Add-On Code

EAN-13 Beginning with 378/379 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with a “378” or “379”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with a “378” or “379” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



0402130

**** Do Not Require Add-On Code**



0402140

Require Add-On Code



0006000
**** Exit Setup**



EAN-13 Beginning with 414/419 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with a “414” or “419”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with a “414” or “419” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



**** Do Not Require Add-On Code**



Require Add-On Code

EAN-13 Beginning with 434/439 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with a “434” or “439”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with a “434” or “439” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



**** Do Not Require Add-On Code**



Require Add-On Code





0006010
Enter Setup

EAN-13 Beginning with 977 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “977”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with “977” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



0402190

**** Do Not Require Add-On Code**



0402200

Require Add-On Code

EAN-13 Beginning with 978 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “978”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with “978” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



0402210

**** Do Not Require Add-On Code**



0402220

Require Add-On Code



0006000
**** Exit Setup**



0006010

Enter Setup

EAN-13 Beginning with 979 Add-On Code Required

This setting programs the engine to require an add-on code (2-digit or 5-digit) on EAN-13 barcodes that begin with “979”. The following settings can be programmed:

Require Add-On Code: All EAN-13 barcodes that begin with “979” must have a 2-digit or 5-digit add-on code. The EAN-13 barcode with the add-on code is then transmitted. If the required add-on code is not found, the EAN-13 barcode is discarded.

Do Not Require Add-On Code: If you have selected **Require Add-On Code**, and you want to disable this feature, scan **Do Not Require Add-On Code**. EAN-13 barcodes are handled, depending on your selection for the “Add-On Code Required” feature.



0402230

**** Do Not Require Add-On Code**



0402240

Require Add-On Code



0006000

**** Exit Setup**



0006010
Enter Setup

ISSN

Restore Factory Defaults



0421000

Restore the Factory Defaults of ISSN

Enable/Disable ISSN



0421020

Enable ISSN



0421010

**** Disable ISSN**



0006000
**** Exit Setup**



0006010
Enter Setup

Add-On Code

An ISSN barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0421030

Enable 2-Digit Add-On Code



0421040

**** Disable 2-Digit Add-On Code**



0421050

Enable 5-Digit Add-On Code



0421060

**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of ISSN barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes ISSN and ignores the add-on code when presented with an ISSN plus add-on barcode. It can also decode ISSN barcodes without add-on codes.

Add-On Code Required

When **ISSN Add-On Code Required** is selected, the engine will only read ISSN barcodes that contain add-on codes.



0421070

ISSN Add-On Code Required



0421080

**** ISSN Add-On Code Not Required**



0006000
** Exit Setup



0006010
Enter Setup

ISBN

Restore Factory Default



0416000
Restore the Factory Defaults of ISBN

Enable/Disable ISBN



0416020
**** Enable ISBN**



0416010
Disable ISBN

Set ISBN Format



0416030
**** ISBN-13**



0416040
ISBN-10



0006000
**** Exit Setup**



0006010
Enter Setup

Add-On Code

An ISBN barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0416050

Enable 2-Digit Add-On Code



0416060

**** Disable 2-Digit Add-On Code**



0416070

Enable 5-Digit Add-On Code



0416080

**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of ISBN barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes ISBN and ignores the add-on code when presented with an ISBN plus add-on barcode. It can also decode ISBN barcodes without add-on codes.

Add-On Code Required

When **ISBN Add-On Code Required** is selected, the engine will only read ISBN barcodes that contain add-on codes.



0416090

ISBN Add-On Code Required



0416100

**** ISBN Add-On Code Not Required**



0006000
**** Exit Setup**



0006010
Enter Setup

UPC-E

Restore Factory Defaults



0403000

Restore the Factory Defaults of UPC-E

Enable/Disable UPC-E



0403020

**** Enable UPC-E**



0403010

Disable UPC-E

Transmit Check Character



0403040

**** Transmit UPC-E Check Character**



0403030

Do Not Transmit UPC-E Check Character



0006000
**** Exit Setup**



Add-On Code

A UPC-E barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



Enable 2-Digit Add-On Code



**** Disable 2-Digit Add-On Code**



Enable 5-Digit Add-On Code



**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of UPC-E barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes UPC-E and ignores the add-on code when presented with a UPC-E plus add-on barcode. It can also decode UPC-E barcodes without add-on codes.

Add-On Code Required

When **UPC-E Add-On Code Required** is selected, the engine will only read UPC-E barcodes that contain add-on codes.



UPC-E Add-On Code Required



**** UPC-E Add-On Code Not Required**





0006010
Enter Setup

Transmit System Character “0”

The first character of UPC-E barcode is the system character “0”.



0403100

**** Transmit System Character “0”**



0403090

Do Not Transmit System Character “0”

UPC-E Extension

Disable UPC-E Extend: Transmit UPC-E barcodes as is.

Enable UPC-E Extend: Extend UPC-E barcodes to make them compatible in length to UPC-A.



0403120

Enable UPC-E Extend



0403110

**** Disable UPC-E Extend**



0006000
**** Exit Setup**



0006010
Enter Setup

UPC-A

Restore Factory Defaults



0404000

Restore the Factory Defaults of UPC-A

Enable/Disable UPC-A



0404020

**** Enable UPC-A**



0404010

Disable UPC-A

Transmit Check Character



0404040

**** Transmit UPC-A Check Character**



0404030

Do Not Transmit UPC-A Check Character



0006000
**** Exit Setup**



0006010
Enter Setup

Add-On Code

A UPC-A barcode can be augmented with a two-digit or five-digit add-on code to form a new one.



0404060

Enable 2-Digit Add-On Code



0404050

**** Disable 2-Digit Add-On Code**



0404080

Enable 5-Digit Add-On Code



0404070

**** Disable 5-Digit Add-On Code**

Enable 2-Digit Add-On Code/ Enable 5-Digit Add-On Code: The engine decodes a mix of UPC-A barcodes with and without 2-digit/5-digit add-on codes.

Disable 2-Digit Add-On Code/ Disable 5-Digit Add-On Code: The engine decodes UPC-A and ignores the add-on code when presented with a UPC-A plus add-on barcode. It can also decode UPC-A barcodes without add-on codes.

Add-On Code Required

When **UPC-A Add-On Code Required** is selected, the engine will only read UPC-A barcodes that contain add-on codes.



0404110

UPC-A Add-On Code Required



0404120

**** UPC-A Add-On Code Not Required**



0006000
**** Exit Setup**



0006010

Enter Setup

Transmit Preamble Character

Preamble characters (Country Code and System Character) can be transmitted as part of a UPC-A barcode. Select one of the following options for transmitting UPC-A preamble to the host device: transmit system character only or transmit system character and country code ("0" for USA).



0404100

System Character & Country Code



0404090

**** System Character**



0006000

**** Exit Setup**



0006010
Enter Setup

Interleaved 2 of 5

Restore Factory Defaults



0405000

Restore the Factory Defaults of Interleaved 2 of 5

Enable/Disable Interleaved 2 of 5



0405020

**** Enable Interleaved 2 of 5**



0405010

Disable Interleaved 2 of 5

Set Length Range for Interleaved 2 of 5



0405030

Set the Minimum Length



0405040

Set the Maximum Length



0006000
**** Exit Setup**



Check Character Verification

A check character is optional for Interleaved 2 of 5 and can be added as the last character. It is a calculated value used to verify the integrity of the data.

Disable: The engine transmits Interleaved 2 of 5 barcodes as is.

Do Not Transmit Check Character After Verification: The engine checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted except the last digit, whereas those failing it will not be transmitted.

Transmit Check Character After Verification: The engine checks the integrity of all Interleaved 2 of 5 barcodes to verify that the data complies with the check character algorithm. Barcodes passing the check will be transmitted, whereas those failing it will not be transmitted.



Do Not Transmit Check Character After Verification



Transmit Check Character After Verification





0006010
Enter Setup

ITF-14

ITF-14 is a special kind of Interleaved 2 of 5 with a length of 14 characters and the last character as the check character.



0405260
Restore the Factory Defaults of ITF-14



0405080
Disable ITF-14



**** Enable ITF-14 But Do Not Transmit Check Character**



Enable ITF-14 and Transmit Check Character

Note: It is advisable not to enable ITF-14 and Interleaved 2 of 5 at the same time.



0006000
**** Exit Setup**



0006010
Enter Setup

ITF-6

ITF-6 is a special kind of Interleaved 2 of 5 with a length of 6 characters and the last character as the check character.



0405270

Restore the Factory Defaults of ITF-6



0405110

**** Disable ITF-6**



0405120

Enable ITF-6 But Do Not Transmit Check Character



0405130

Enable ITF-6 and Transmit Check Character

Note: It is advisable not to enable ITF-6 and Interleaved 2 of 5 at the same time.



0006000
**** Exit Setup**



0006010
Enter Setup

Matrix 2 of 5

Restore Factory Defaults



0406000

Restore the Factory Defaults of Matrix 2 of 5

Enable/Disable Matrix 2 of 5



0406020

Enable Matrix 2 of 5



0406010

**** Disable Matrix 2 of 5**

Set Length Range for Matrix 2 of 5



0406030

Set the Minimum Length



0406040

Set the Maximum Length



0006000
**** Exit Setup**



Check Character Verification



**** Do Not Transmit Check Character After Verification**



Transmit Check Character After Verification





0006010
Enter Setup

Industrial 2 of 5

Restore Factory Defaults



0417000

Restore the Factory Defaults of Industrial 2 of 5

Enable/Disable Industrial 2 of 5



0417020

**** Enable Industrial 2 of 5**



0417010

Disable Industrial 2 of 5

Set Length Range for Industrial 2 of 5



0417030

Set the Minimum Length



0417040

Set the Maximum Length



0006000
**** Exit Setup**



Check Character Verification



Transmit Check Character After Verification



Do Not Transmit Check Character After Verification





0006010
Enter Setup

Standard 2 of 5 (IATA 2 of 5)

Restore Factory Defaults



0418000

Restore the Factory Defaults of Standard 25

Enable/Disable Standard 25



0418020

** Enable Standard 25



0418010

Disable Standard 25

Set Length Range for Standard 25



0418030

Set the Minimum Length



0418040

Set the Maximum Length



0006000
** Exit Setup



Check Character Verification



Transmit Check Character After Verification



Do Not Transmit Check Character After Verification





0006010
Enter Setup

Code 39

Restore Factory Defaults



0408000

Restore the Factory Defaults of Code 39

Enable/Disable Code 39



0408020

**** Enable Code 39**



0408010

Disable Code 39

Transmit Start/Stop Character



0408090

Transmit Start/Stop Character



0408080

**** Do not Transmit Start/Stop Character**



0006000
**** Exit Setup**



0006010
Enter Setup

Set Length Range for Code 39



Set the Minimum Length



Set the Maximum Length

Check Character Verification



**** Disable**



Transmit Check Character After Verification



Do Not Transmit Check Character After Verification

Enable/Disable Code 39 Full ASCII

The engine can be configured to identify all ASCII characters by scanning the appropriate barcode below.



**** Enable Code 39 Full ASCII**



Disable Code 39 Full ASCII



0006000
**** Exit Setup**



0006010
Enter Setup

Enable/Disable Code 32

Code 32 is a variant of Code 39 used by the Italian pharmaceutical industry. Scan the appropriate bar code below to enable or disable Code 32. Code 39 must be enabled and Code 39 check character verification must be disabled for this parameter to function.



0408120
**** Disable Code 32**



0408130
Enable Code 32

Code 32 Prefix

Scan the appropriate bar code below to enable or disable adding the prefix character "A" to all Code 32 barcodes. Code 32 must be enabled for this parameter to function.



0408140
**** Disable Code 32 Prefix**



0408150
Enable Code 32 Prefix



0006000
**** Exit Setup**



0006010
Enter Setup

Transmit Code 32 Check Character

Code 32 must be enabled for this parameter to function.



0408180

**** Do Not Transmit Code 32 Check Character**



0408190

Transmit Code 32 Check Character

Transmit Code 32 Start/Stop Character

Code 32 must be enabled for this parameter to function.



0408160

**** Do Not Transmit Code 32 Start/Stop Character**



0408170

Transmit Code 32 Start/Stop Character



0006000
**** Exit Setup**



0006010
Enter Setup

Codabar

Restore Factory Defaults



0409000

Restore the Factory Defaults of Codabar

Enable/Disable Codabar



0409020

**** Enable Codabar**



0409010

Disable Codabar

Set Length Range for Codabar



0409030

Set the Minimum Length



0409040

Set the Maximum Length



0006000
**** Exit Setup**



0006010

Enter Setup

Check Character Verification



0409050

**** Disable**



0409070

Transmit Check Character After Verification



0409060

Do Not Transmit Check Character After Verification

Transmit Start/Stop Character



0409090

Transmit Start/Stop Character



0409080

**** Do not Transmit Start/Stop Character**



0006000

**** Exit Setup**



0006010
Enter Setup

Start/Stop Character Format

You can choose your desired start/stop character format by scanning the appropriate barcode below.



0409100

**** ABCD/ABCD as the Start/Stop Character**



0409110

ABCD/TN*E as the Start/Stop Character



0409120

Start/Stop Character in Uppercase



0409130

Start/Stop Character in Lowercase



0006000
**** Exit Setup**



0006010

Enter Setup

Code 93

Restore Factory Defaults



0410000

Restore the Factory Defaults of Code 93

Enable/Disable Code 93



0410020

** Enable Code 93



0410010

Disable Code 93

Set Length Range for Code 93



0410030

Set the Minimum Length



0410040

Set the Maximum Length



0006000

** Exit Setup



0006010
Enter Setup

Check Character Verification



0410050

Disable



0410060

**** Do Not Transmit Check Character After Verification**



0410070

Transmit Check Character After Verification



0006000
**** Exit Setup**



0006010

Enter Setup

GS1-Databar (RSS)

Restore Factory Defaults



0413000

Restore the Factory Defaults of GS1-Databar

Enable/Disable GS1 Databar



0413020

** Enable GS1-DataBar



0413010

Disable GS1-DataBar

Transmit Application Identifier "01"



0413060

** Transmit Application Identifier "01"



0413050

Do Not Transmit Application Identifier "01"



0006000

** Exit Setup



0006010
Enter Setup

Code 11

Restore Factory Defaults



0415000

Restore the Factory Defaults of Code 11

Enable/Disable Code 11



0415020

**** Enable Code 11**



0415010

Disable Code 11

Set Length Range for Code 11



0415030

Set the Minimum Length



0415040

Set the Maximum Length



0006000
**** Exit Setup**



0006010

Enter Setup

Transmit Check Character



0415120

Transmit Check Character



0415110

** Do Not Transmit Check Character

Check Character Verification



0415050

Disable



0415060

** One Check Character, MOD11



0415070

Two Check Characters, MOD11/MOD11



0415080

Two Check Characters, MOD11/MOD9



0415090

One Check Character, MOD11 (Len≤10)
Two Check Characters, MOD11/MOD11 (Len>10)



0415100

One Check Character, MOD11 (Len≤10)
Two Check Characters, MOD11/MOD9 (Len>10)



0006000

** Exit Setup



0006010
Enter Setup

Plessey

Restore Factory Defaults



0419000

Restore the Factory Defaults of Plessey

Enable/Disable Plessey



0419020

**** Enable Plessey**



0419010

Disable Plessey

Set Length Range for Plessey



0419030

Set the Minimum Length



0419040

Set the Maximum Length



0006000
**** Exit Setup**



0006010

Enter Setup

Check Character Verification



0419050

Disable



0419060

**** Do Not Transmit Check Character After Verification**



0419070

Transmit Check Character After Verification



0006000

**** Exit Setup**



0006010
Enter Setup

MSI-Plessey

Restore Factory Defaults



0420000

Restore the Factory Defaults of MSI-Plessey

Enable/Disable MSI-Plessey



0420020

**** Enable MSI-Plessey**



0420010

Disable MSI-Plessey

Set Length Range for MSI-Plessey



0420030

Set the Minimum Length



0420040

Set the Maximum Length



0006000
**** Exit Setup**



0006010

Enter Setup

Transmit Check Character



0420100

Transmit Check Character



0420090

** Do Not Transmit Check Character

Check Character Verification



0420050

Disable



0420060

** One Check Character, MOD10



0420070

Two Check Characters, MOD10/MOD10



0420080

Two Check Characters, MOD10/MOD11



0006000

** Exit Setup



0006010
Enter Setup

JAN

JAN Code for Magazines

Japanese Article Number (JAN) is a barcode standard compatible with the EAN. JAN barcodes for magazines are EAN-13 barcodes starting with a “491” and containing a 5-digit add-on code. Scan the appropriate barcode below to enable or disable JAN barcodes for magazines.



Enable JAN Code for Magazines



**** Disable JAN Code for Magazines**



0006000
**** Exit Setup**



JAN Code for Books

JAN barcodes for books include an ISBN barcode starting with a “978” and an EAN-13 barcodes starting with a “191” or “192”. When left on the default setting (**Disable JAN Code for Books**), the engine treats the ISBN and EAN-13 barcodes as single barcodes.

When enabled, the engine must see and read the ISBN and EAN-13 barcodes in a single read to transmit the data. No data is output unless both barcodes are read.



Enable JAN Code for Books



**** Disable JAN Code for Books**

You may select either of the following ways to transmit JAN barcodes for books.

If you scan the **Do Not Require Concatenation** barcode, the engine transmits the ISBN and EAN-13 barcodes as separate symbologies.

If you scan the **Require Concatenation** barcode, the engine transmits the ISBN and EAN-13 barcodes as an ISBN barcode.



Require Concatenation



**** Do Not Require Concatenation**

A separator (a comma “,”) can be inserted between the ISBN and EAN-13 barcodes. Note that the **Require Concatenation** feature must be enabled for this setting to function.



Enable Barcode Separator



**** Disable Barcode Separator**





0006010
Enter Setup

2D Symbolologies

PDF 417

Restore Factory Defaults



0501000
Restore the Factory Defaults of PDF 417

Enable/Disable PDF 417



0501020
**** Enable PDF 417**



0501010
Disable PDF 417

Set Length Range for PDF 417



0501030
Set the Minimum Length



0501040
Set the Maximum Length



0006000
**** Exit Setup**



0006010
Enter Setup

PDF 417 Twin Code

PDF417 twin code is 2 PDF417 barcodes paralleled vertically or horizontally. They must both be either regular or inverse barcodes. They must have similar specifications and be placed closely together.

There are 3 options for reading PDF417 twin codes:

Single PDF417 Only: Read either PDF417 code.

Twin PDF417 Only: Read both PDF417 codes.

Both Single & Twin: Read both PDF417 codes. If successful, transmit as twin PDF417 only. Otherwise, try single PDF417 only.



**** Single PDF417 Only**



Twin PDF417 Only



Both Single & Twin

Character Encoding



**** Default Character Encoding**



UTF-8



0006000
**** Exit Setup**



0006010
Enter Setup

Enable/Disable PDF417 ECI Output



0501341
Disable PDF417 ECI Output



0501340
**** Enable PDF417 ECI Output**



0006000
**** Exit Setup**



0006010
Enter Setup

QR Code

Restore Factory Defaults



0502000

Restore the Factory Defaults of QR Code

Enable/Disable QR Code



0502020

**** Enable QR Code**



0502010

Disable QR Code

Set Length Range for QR Code



0502030

Set the Minimum Length



0502040

Set the Maximum Length

Micro QR



0502110

**** Enable Micro QR**



0502100

Disable Micro QR



0006000
**** Exit Setup**



0006010
Enter Setup

QR Twin Code

QR twin code is 2 QR barcodes paralleled vertically or horizontally. They must both be either regular or inverse barcodes. They must have similar specifications and be placed closely together.

There are 3 options for reading QR twin codes:

Single QR Only: Read either QR code.

Twin QR Only: Read both QR codes.

Both Single & Twin: Read both QR codes. If successful, transmit as twin QR only. Otherwise, try single QR only.



0502070
**** Single QR Only**



0502080
Twin QR Only



0502090
Both Single & Twin

Character Encoding



0502160
**** Default Character Encoding**



0502161
UTF-8



0006000
**** Exit Setup**



0006010

Enter Setup

Enable/Disable QR ECI Output



0502151

Disable QR ECI Output



0502150

**** Enable QR ECI Output**



0006000

**** Exit Setup**



0006010
Enter Setup

Data Matrix

Restore Factory Defaults



0504000

Restore the Factory Defaults of Data Matrix

Enable/Disable Data Matrix



0504020

**** Enable Data Matrix**



0504010

Disable Data Matrix

Set Length Range for Data Matrix



0504030

Set the Minimum Length



0504040

Set the Maximum Length



0006000
**** Exit Setup**



0006010

Enter Setup

Rectangular Barcode



0504110

**** Enable Rectangular Barcode**



0504100

Disable Rectangular Barcode

Mirror Image



0504331

**** Decode Mirror Images**



0504330

Do Not Decode Mirror Images



0006000

**** Exit Setup**



0006010
Enter Setup

Data Matrix Twin Code

Data Matrix twin code is 2 Data Matrix barcodes paralleled vertically or horizontally. They must both be either regular or inverse barcodes. They must have similar specifications and be placed closely together.

There are 3 options for reading Data Matrix twin codes:

Single Data Matrix Only: Read either Data Matrix code.

Twin Data Matrix Only: Read both Data Matrix codes. Transmission order: Data Matrix code on the left (in the upper position) followed by the one on the right (in the lower position).

Both Single & Twin: Read both Data Matrix codes. If successful, transmit as twin Data Matrix only. Otherwise, try single Data Matrix only.



0504070

**** Single Data Matrix Only**



0504080

Twin Data Matrix Only



0504090

Both Single & Twin

Character Encoding



0504350

**** Default Character Encoding**



0504351

UTF-8



0006000
**** Exit Setup**



0006010

Enter Setup

Enable/Disable Data Matrix ECI Output



0504341

Disable Data Matrix ECI Output



0504340

**** Enable Data Matrix ECI Output**



0006000

**** Exit Setup**



0006010
Enter Setup

Chinese Sensible Code

Restore Factory Defaults



0508000

Restore the Factory Defaults of Chinese Sensible Code

Enable/Disable Chinese Sensible Code



0508020

Enable Chinese Sensible Code



0508010

**** Disable Chinese Sensible Code**

Set Length Range for Chinese Sensible Code



0508030

Set the Minimum Length



0508040

Set the Maximum Length



0006000
**** Exit Setup**



0006010

Enter Setup

Enable/Disable Chinese Sensible Code ECI Output



0508111

Disable Chinese Sensible Code ECI Output



0508110

**** Enable Chinese Sensible Code ECI Output**



0006000

**** Exit Setup**



0006010
Enter Setup

Chapter 9 Image Control

Image Flipping

The user may get reversed images when the engine is installed in non-standard ways. When it happens, image flipping can be used to right the “wrong”.

The following figures illustrate standard image and three flipped images.

- Fig.9-1 Standard Image: Image the engine should get when it is installed properly and no reflector is used in its optical imaging system.
- Fig.9-2 Horizontal Flipped Image: It happens when horizontal reflection occurs along the optical path. To get standard images, enable the **Flip Horizontally** option.
- Fig.9-3 Vertical Flipped Image: It happens when vertical reflection occurs along the optical path. To get standard images, enable the **Flip Vertically** option.
- Fig.9-4 Horizontal and Vertical Flipped Image: It happens when the engine is installed upside down. To get standard images, enable the **Flip Horizontally and Vertically** option.



Fig.9-1 Standard Image



Fig.9-2 Horizontal Flipped Image



Fig.9-3 Vertical Flipped Image



Fig.9-4 Horizontal and Vertical Flipped Image



0006000
** Exit Setup



0006010

Enter Setup

Flip



0202000

**** Do Not Flip**



0202030

Flip Vertically



0202031

Flip Horizontally



0202032

Flip Horizontally and Vertically

Flip Vertically



0202033

Flip Vertically



0202034

Do Not Flip Vertically

Flip Horizontally



0202035

Flip Horizontally



0202036

Do Not Flip Horizontally



0006000

**** Exit Setup**



Chapter 10 Batch Programming

Introduction

Batch programming enables users to integrate a batch of commands into a single batch barcode.

Listed below are batch programming rules:

1. Command format: Command + "=" + Parameter Value.
2. Each command is terminated by a semicolon (;). Note that there is no space between a command and its terminator semicolon.
3. Use the barcode generator software to generate a 2D batch barcode.

Example: Create a batch barcode for **Illumination Always On** (0200010), **Sense Mode** (0302010), **Decode Session Timeout** (0313000) = 2s:

1. Input the commands:

0200010;0302010;0313000=2000;

2. Generate a batch barcode.

When setting up an engine with the above configuration, scan the **Enable Batch Barcode** barcode and then the batch barcode generated.



Enable Batch Barcode



** Exit Setup



0006010
Enter Setup

Create a Batch Command

A batch command may contain a number of individual commands each of which is terminated by a semicolon (;).

Command Structure: Command (+ "=" + Parameter Value)

4 command syntaxes are described as below:

1. Syntax 1: Command

This syntax applies to most configuration situations.

Example:

Set the Baud Rate to 38400bps: **0100060**

Enable the Sense Mode: **0302010**

2. Syntax 2: Command + "=" + Decimal Digit(s)

This syntax applies to the options/features programming which requires the entry of parameter value (decimal), such as the Maximum/Minimum Length, Decode Session Timeout, Timeout between Decodes (Same Barcode) and Sensitivity.

Example:

Set the Decode Session Timeout to 3000ms: **0313000=3000**

Set the Sensitivity to (level) 10: **0312040=10**

3. Syntax 3: Command + "=" + Hexadecimal Digit(s) (e.g., 0x101A, 0x2C03)

This syntax applies to the features/options programming like the Custom Prefix/Suffix, Terminating Character Suffix, Code ID Suffix, which requires the entry of parameter value (hexadecimal).

Example:

Set the Terminating Character Suffix to CR/LF: **0310000=0x0D0A**

4. Syntax 4: Command + "=" + Double Quotation Marks

For situations where the parameter value is visible character in Syntax 3, this syntax is also appropriate.

Example:

Set the Custom Prefix to AUTO-ID: **0300000="AUTO-ID"**



0006000
** Exit Setup



0006010
Enter Setup

Create a Batch Barcode

Batch barcodes can be produced in the format of PDF417, QR Code or Data Matrix.

Example: Create a batch barcode for **Illumination Always On, Sense Mode, Decode Session Timeout = 2s**:

1. Input the following commands:

```
0200010;0302010;0313000=2000;
```

2. Generate a QR batch barcode.



0006000
** Exit Setup



Use Batch Barcode

To put a batch barcode into use, scan the following barcodes. (Use the example above.)



Enter Setup



Enable Batch Barcode



Batch Barcode



Exit Setup



Chapter 11 Troubleshooting

FAQ

Problem: Some barcodes cannot be read.

Solution:

1. Find out the barcode type and verify that the barcode type is enabled. If the barcode parameters include check character verification, select the Disable option.
2. If you do not know the barcode type, enable all symbologies.
3. If they are inverse barcodes (bright images on a dark background), enable the Video Reverse feature.

Problem: Incorrect output.

Solution:

1. If this problem happens to all barcodes and additional characters appear before/after barcode data, disable all prefix/suffix.
2. If this problem only happens to some barcodes and matches one of the following situations:
 - a) incomplete barcode data: Enable the check character verification.
 - b) both the first and last characters are asterisks (*): Disable the transmission of start/stop characters of Code 39.
 - c) "a" transmitted as "+A": Enable Code 39 Full ASCII.

Problem: Barcodes can be read, but cannot be displayed.

Solution: Verify that the serial port parameter (such as baud rate, data bit and stop bit) settings match the host requirements.

Problem: Illumination and aiming beams are OFF.

Solution:

1. Verify that the engine is properly powered up.
2. Send “?” to the engine. If the engine returns a reply of “!”, then send programming commands to turn on illumination and aimer.

Problem: Carriage Return/Line Feed settings.

Solution: See the “**Terminating Character Suffix**” section in Chapter 7.

Appendix

Appendix 1: Factory Defaults Table

Parameter		Factory Default	Remark
Programming Barcode			
Barcode Programming		Disabled	
Programming Barcode Data		Do not send	
Communication Settings			
Normal Mode (TTL-232 & USB supported)		Enabled	Power-Saving Mode: Only TTL-232 supported
TTL-232	Baud Rate	9600	
	Parity Check	None	
	Data Bit	8	
	Stop Bit	1	
	Hardware Flow Control	No flow control	
HID-KBW (optional)	Polling Rate	1ms	
	USB Country Keyboard Type	U.S.	
	Convert Case	No conversion	
	Inter-Keystroke Delay	10ms	
	Beep on Unknown Character	Disabled	
	Emulate ALT + Keypad	Disabled	
	Function Key Mapping	Disabled	
	Emulate Numeric Keypad	Disabled	
Code Page		Windows 1252 (Latin I)	
Scan Mode			
Default Scan Mode		Trigger mode	
Trigger Mode	Decode Session Timeout	3,000ms	Applicable to Trigger mode, Sense mode, Continuous mode. 100~3,600,000ms; 0: Infinite.
	Trigger Condition	Electric level	
	Auto Sleep	Enabled	
	Time Period from Idle to Sleep	500ms	0~65,535ms
	Timeout between Decodes (Same Barcode)	Disabled 1,500ms	 0~65,535ms
	Reset Timeout	Off	

Parameter		Factory Default	Remark
Sense Mode	Decode Session Timeout	3,000ms	Applicable to Trigger mode, Sense mode, Continuous mode. 100~3,600,000ms; 0: Infinite.
	Image Stabilization Timeout	500ms	0~1,600ms
	Timeout between Decodes	1000ms	Applicable to Sense mode, Continuous mode. 0~65,535ms
	Timeout between Decodes (Same Barcode)	Disabled 1,500ms	0~65,535ms
	Reset Timeout	Off	
	Threshold Value of Illumination Change	2	1~16
Continuous Mode	Decode Session Timeout	3,000ms	Applicable to Trigger mode, Sense mode, Continuous mode. 100~3,600,000ms; 0: Infinite.
	Timeout between Decodes	1000ms	Applicable to Sense mode, Continuous mode. 0~65,535ms
	Timeout between Decodes (Same Barcode)	Disabled 1,500ms	0~65,535ms
	Reset Timeout	Off	
Scanning Preferences			
Decode Area		Whole Area Decoding	
Specify Decoding Area		40% top, 60% bottom, 40% left, 60% right	
Illumination & Aiming			
Illumination		Normal	
Aiming		Normal	
Beep & LED Notifications			
Startup Beep		Enabled	
Good Read Beep for Non-Programming Barcode	Notification	Enabled	
	Beep Type	Type 3	
	Beep Volume	Loud	
Good Read Beep for Programming Barcode		Enabled	
Good Read LED		Enabled	
NGR (Not Good Read) Message		Do not transmit	
		None	

Parameter	Factory Default	Remark
Prefix & Suffix		
Prefix Sequence	Custom Prefix+Code ID+AIM ID	
Custom Prefix	Disabled	
	None	
AIM ID Prefix	Disabled	
Code ID Prefix	Disabled	
Custom Suffix	Disabled	
	None	
Terminating Character Suffix	Enabled	
	0x0D	Carriage Return
Image Control		
Image Flipping	Do not flip	

Parameter	Factory Default	Remark
Symbologies		
Video Reverse	Disabled	Applicable to all symbologies.
Code 128		
Code 128	Enabled	
Maximum Length	127	
Minimum Length	1	
GS1-128 UCC/EAN-128)		
GS1-128	Enabled	
Maximum Length	127	
Minimum Length	1	
AIM-128		
AIM-128	Enabled	
Maximum Length	127	
Minimum Length	1	
EAN-8		
EAN-8	Enabled	
Check Character	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Extend to EAN-13	Disabled	
EAN-13		
EAN-13	Enabled	
Check Character	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
EAN-13 Beginning with 290 Add-On Code Required	Do Not Require Add-On Code	
EAN-13 Beginning with 378/379 Add-On Code Required	Do Not Require Add-On Code	
EAN-13 Beginning with 414/419 Add-On Code Required	Do Not Require Add-On Code	

Parameter	Factory Default	Remark
EAN-13 Beginning with 434/439 Add-On Code Required	Do Not Require Add-On Code	
EAN-13 Beginning with 977 Add-On Code Required	Do Not Require Add-On Code	
EAN-13 Beginning with 978 Add-On Code Required	Do Not Require Add-On Code	
EAN-13 Beginning with 979 Add-On Code Required	Do Not Require Add-On Code	
ISSN		
ISSN	Disabled	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
ISBN		
ISBN	Enabled	
ISBN Format	ISBN-13	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
UPC-E		
UPC-E	Enabled	
Check Character	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	
Extend to UPC-A	Disabled	
System Character "0"	Transmit	
UPC-A		
UPC-A	Enabled	
Check Character	Transmit	
2-Digit Add-On Code	Disabled	
5-Digit Add-On Code	Disabled	
Add-On Code	Not required	

Parameter	Factory Default	Remark
System Character	Transmit	
Country Code	Do not transmit	
Interleaved 2 of 5		
Interleaved 2 of 5	Enabled	
Check Character Verification	Disabled	
Check Character	Do not transmit	
Maximum Length	100	
Minimum Length	6	
ITF-6		
ITF-6	Disabled	
Check Character	Do not transmit	
ITF-14		
ITF-14	Enabled	
Check Character	Do not transmit	
Matrix 2 of 5		
Matrix 2 of 5	Disabled	
CheckCharacter Verification	Enabled	
Check Character	Do not transmit	
Maximum Length	127	
Minimum Length	6	
Industrial 2 of 5		
Industrial 2 of 5	Enabled	
Check Character Verification	Disabled	
Check Character	Do not transmit	
Maximum Length	127	
Minimum Length	6	
Standard 2 of 5		
Standard 2 of 5	Enabled	
Check Character Verification	Disabled	
Check Character	Do not transmit	
Maximum Length	127	
Minimum Length	6	

Parameter	Factory Default	Remark
Code 39		
Code 39	Enabled	
Check Character Verification	Disabled	
Check Character	Do not transmit	
Start/Stop Character	Do not transmit	
Code 39 Full ASCII	Enabled	
Code 32	Disabled	
Code 32 Prefix	Disabled	
Code 32 Check Character	Do not transmit	
Code 32 Start/Stop Character	Do not transmit	
Maximum Length	127	
Minimum Length	2	
Codabar		
Codabar	Enabled	
Check Character Verification	Disabled	
Check Character	Do not transmit	
Start/Stop Character	Do not transmit	
Start/Stop Character Format	ABCD/ABCD	
Maximum Length	127	
Minimum Length	2	
Code 93		
Code 93	Enabled	
Check Character Verification	Enabled	
Check Character	Do not transmit	
Maximum Length	127	
Minimum Length	3	
GS1 Databar		
GS1 Databar	Enabled	
Application Identifier "01"	Transmit	

Parameter	Factory Default	Remark
Code 11		
Code 11	Enabled	
Check Character Verification	One check character, MOD11	
Check Character	Do not transmit	
Maximum Length	127	
Minimum Length	2	
Plessey		
Plessey	Enabled	
Check Character Verification	Enabled	
Check Character	Do not transmit	
Maximum Length	127	
Minimum Length	1	
MSI-Plessey		
MSI-Plessey	Enabled	
Check Character Verification	One check Character, MOD10	
Check Character	Do not transmit	
Maximum Length	127	
Minimum Length	2	
JAN		
JAN Code for Magazines	Disabled	
JAN Code for Books	Disabled	
Require Concatenation (for JAN Code for Books)	Disabled	
Barcode Separator (for JAN Code for Books)	Disabled	
PDF 417		
PDF 417	Enabled	
Maximum Length	2710	
Minimum Length	1	
PDF 417 Twin Code	Read single PDF417 only	
Character Encoding	Default Character Encoding	
PDF417 ECI Output	Enabled	

Parameter	Factory Default	Remark
QR Code		
QR Code	Enabled	
Micro QR	Enabled	
Maximum Length	7089	
Minimum Length	1	
QR Twin Code	Read single QR only	
Character Encoding	Default Character Encoding	
QR ECI Output	Enabled	
Data Matrix		
Data Matrix	Enabled	
Rectangular Barcode	Enabled	
Mirror Image	Decode	
Maximum Length	3116	
Minimum Length	1	
DM Twin Code	Read single DM only	
Character Encoding	Default Character Encoding	
Data Matrix ECI Output	Enabled	
Chinese Sensible Code		
Chinese Sensible Code	Disabled	
Maximum Length	7827	
Minimum Length	1	
Chinese Sensible Code ECI Output	Enabled	

Appendix 2: AIM ID Table

Symbology	AIM ID	Remark
EAN-13	]E0	Standard EAN-13
	]E3	EAN-13 + 2/5-Digit Add-On Code
EAN-8	]E4	Standard EAN-8
	]E4...]E1...	EAN-8 + 2-Digit Add-On Code
	]E4...]E2...	EAN-8 + 5-Digit Add-On Code
UPC-E	]E0	Standard UPC-E
	]E3	UPC-E + 2/5-Digit Add-On Code
UPC-A	]E0	Standard UPC-A
	]E3	UPC-A + 2/5-Digit Add-On Code
Code 128	]C0	Standard Code 128
GS1-128 (UCC/EAN-128)	]C1	FNC1 is the character right after the start character
AIM-128	]C2	FNC1 is the 2nd character after the start character
ISBT-128	]C4	
Interleaved 2 of 5	]I0	No check character verification
	]I1	Transmit check character after verification
	]I3	Do not transmit check character after verification
ITF-6	]I1	Transmit check character
	]I3	Do not transmit check character
ITF-14	]I1	Transmit check character
	]I3	Do not transmit check character
Industrial 2 of 5	]S0	Not specified
Standard 2 of 5	]R0	No check character verification
	]R8	MOD10; do not transmit check character
	]R9	MOD10; transmit check character
Code 39 Code 32	]A0	Transmit barcodes as is; Full ASCII disabled; no check character verification
	]A1	MOD43; transmit check character
	]A3	MOD43; do not transmit check character
	]A4	Full ASCII enabled; no check character verification
	]A5	Full ASCII enabled; transmit check character
	]A7	Full ASCII enabled; do not transmit check character
Codabar	]F0	Standard Codabar
	]F2	Transmit check character after verification
	]F4	Do not transmit check character after verification

Symbology	AIM ID	Remark
Code 93	JG0	Standard Code 93
Code 11	JH0	MOD11; transmit check character
	JH1	MOD11/MOD11; transmit check character
	JH3	Do not transmit check character after verification
	JH9	No check character verification
GS1-DataBar (RSS)	Je0	Standard GS1-DataBar
Plessey	JP0	Standard Plessey
MSI-Plessey	JM0	MOD10; transmit check character
	JM1	MOD10; do not transmit check character
	JM7	MOD10/ MOD11; do not transmit check character
	JM8	MOD10/ MOD11; transmit check character
	JM9	No check character verification
Matrix 2 of 5	JX0	Specified by the manufacturer
	JX1	No check character verification
	JX2	MOD10; transmit check character
	JX3	MOD11; do not transmit check character
ISBN	JX4	Standard ISBN
ISSN	JX5	Standard ISSN
PDF417	JL0	Comply with 1994 PDF417 specifications
Data Matrix	Jd0	ECC000 - ECC140
	Jd1	ECC200
	Jd2	ECC200, FNC1 is the 1st or 5th character after the start character
	Jd3	ECC200, FNC1 is the 2nd or 6th character after the start character
	Jd4	ECC200, ECI included
	Jd5	ECC200, FNC1 is the 1st or 5th character after the start character, ECI included
	Jd6	ECC200, FNC1 is the 2nd or 6th character after the start character, ECI included
QR Code	JQ0	QR1
	JQ1	2005 version, ECI excluded
	JQ2	2005 version, ECI included
	JQ3	QR Code 2005, ECI excluded, FNC1 is the 1st character after the start character
	JQ4	QR Code 2005, ECI included, FNC1 is the 1st character after the start character
	JQ5	QR Code 2005, ECI excluded, FNC1 is the 2nd character after the start character
	JQ6	QR Code 2005, ECI included, FNC1 is the 2nd character after the start character
Chinese Sensible Code	JX0	

Reference: ISO/IEC 15424:2008 Information technology – Automatic identification and data capture techniques – Data Carrier Identifiers (including Symbology Identifiers).

Appendix 3: Code ID Table

Symbology	Code ID
Code 128	j
GS1-128(UCC/EAN-128)	j
AIM-128	f
EAN-8	d
EAN-13	d
ISSN	n
ISBN	B
UPC-E	c
UPC-A	c
Interleaved 2 of 5	e
ITF-6	e
ITF-14	e
Matrix 2 of 5	v
Industrial 2 of 5	D
Standard 2 of 5	s
Code 39, Code 32	b
Codabar	a
Code 93	i
Code 11	H
Plessey	p
MSI-Plessey	m
GS1 Databar	R
PDF417	r
QR Code	Q
Data Matrix	u
Chinese Sensible Code	h

Appendix 4: ASCII Table

Hex	Dec	Char
00	0	NUL (Null char.)
01	1	SOH (Start of Header)
02	2	STX (Start of Text)
03	3	ETX (End of Text)
04	4	EOT (End of Transmission)
05	5	ENQ (Enquiry)
06	6	ACK (Acknowledgment)
07	7	BEL (Bell)
08	8	BS (Backspace)
09	9	HT (Horizontal Tab)
0a	10	LF (Line Feed)
0b	11	VT (Vertical Tab)
0c	12	FF (Form Feed)
0d	13	CR (Carriage Return)
0e	14	SO (Shift Out)
0f	15	SI (Shift In)
10	16	DLE (Data Link Escape)
11	17	DC1 (XON) (Device Control 1)
12	18	DC2 (Device Control 2)
13	19	DC3 (XOFF) (Device Control 3)
14	20	DC4 (Device Control 4)
15	21	NAK (Negative Acknowledgment)
16	22	SYN (Synchronous Idle)
17	23	ETB (End of Trans. Block)
18	24	CAN (Cancel)
19	25	EM (End of Medium)
1a	26	SUB (Substitute)
1b	27	ESC (Escape)
1c	28	FS (File Separator)
1d	29	GS (Group Separator)

Hex	Dec	Char
1e	30	RS (Request to Send)
1f	31	US (Unit Separator)
20	32	SP (Space)
21	33	! (Exclamation Mark)
22	34	" (Double Quote)
23	35	# (Number Sign)
24	36	\$ (Dollar Sign)
25	37	% (Percent)
26	38	& (Ampersand)
27	39	` (Single Quote)
28	40	((Left / Opening Parenthesis)
29	41	) (Right / Closing Parenthesis)
2a	42	* (Asterisk)
2b	43	+ (Plus)
2c	44	, (Comma)
2d	45	- (Minus / Dash)
2e	46	. (Dot)
2f	47	/ (Forward Slash)
30	48	0
31	49	1
32	50	2
33	51	3
34	52	4
35	53	5
36	54	6
37	55	7
38	56	8
39	57	9
3a	58	: (Colon)
3b	59	; (Semi-colon)
3c	60	< (Less Than)
3d	61	= (Equal Sign)

Hex	Dec	Char
3e	62	> (Greater Than)
3f	63	? (Question Mark)
40	64	@ (AT Symbol)
41	65	A
42	66	B
43	67	C
44	68	D
45	69	E
46	70	F
47	71	G
48	72	H
49	73	I
4a	74	J
4b	75	K
4c	76	L
4d	77	M
4e	78	N
4f	79	O
50	80	P
51	81	Q
52	82	R
53	83	S
54	84	T
55	85	U
56	86	V
57	87	W
58	88	X
59	89	Y
5a	90	Z
5b	91	[(Left / Opening Bracket)
5c	92	\ (Back Slash)
5d	93	] (Right / Closing Bracket)

Hex	Dec	Char
5e	94	^ (Caret / Circumflex)
5f	95	_ (Underscore)
60	96	' (Grave Accent)
61	97	a
62	98	b
63	99	c
64	100	d
65	101	e
66	102	f
67	103	g
68	104	h
69	105	i
6a	106	j
6b	107	k
6c	108	l
6d	109	m
6e	110	n
6f	111	o
70	112	p
71	113	q
72	114	r
73	115	s
74	116	t
75	117	u
76	118	v
77	119	w
78	120	x
79	121	y
7a	122	z
7b	123	{ (Left/ Opening Brace)
7c	124	(Vertical Bar)
7d	125	} (Right/Closing Brace)
7e	126	~ (Tilde)
7f	127	DEL (Delete)

Appendix 5: Parameter Programming Examples

The following examples show you how to program parameters by scanning programming barcodes.

a. Program the Decode Session Timeout

Example: Set the decode session timeout to 1500ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Decode Session Timeout** barcode. (See the “**Decode Session Timeout**” section in Chapter 3)
3. Scan the numeric barcodes “1”, “5”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

b. Program the Time Period from Idle to Sleep

Example: Set the time period from idle to sleep to 500ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Time Period from Idle to Sleep** barcode. (See the “**Auto Sleep**” section in Chapter 3)
3. Scan the numeric barcodes “5”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

c. Program the Image Stabilization Timeout

Example: Set the image stabilization timeout to 500ms

1. Scan the **Enter Setup** barcode.
 2. Scan the **Image Stabilization Timeout** barcode. (See the “**Image Stabilization Timeout**” section in Chapter 3)
 3. Scan the numeric barcodes “5”, “0” and “0”.
 4. Scan the **Save** barcode.
 5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

d. Program the Timeout between Decodes (Same Barcode)

Example: Set the timeout between decodes (same barcode) to 1000ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Timeout between Decodes (Same Barcode)** barcode. (See the “**Timeout between Decodes (Same Barcode)**” section in Chapter 3)
3. Scan the numeric barcodes “1”, “0”, “0” and “0”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

e. Program the Threshold Value of Illumination Change

Example: Set the threshold value of illumination change to 4

1. Scan the **Enter Setup** barcode.
2. Scan the **Threshold Value of Illumination Change** barcode. (See the “**Sensitivity**” section in Chapter 3)
3. Scan the numeric barcode “4”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

f. Program the Timeout between Decodes

Example: Set the timeout between decodes to 500ms

1. Scan the **Enter Setup** barcode.
 2. Scan the **Timeout between Decodes** barcode. (See the “**Timeout between Decodes**” section in Chapter 3)
 3. Scan the numeric barcodes “5”, “0” and “0”.
 4. Scan the **Save** barcode.
 5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

g. Program the Decoding Area

Example: Set the decoding area to 20% top, 80% bottom, 20% left and 80% right.

1. Scan the **Enter Setup** barcode.
2. Scan the **Specific Area Decoding** barcode. (See the “**Specific Area Decoding**” section in Chapter 4)
3. Scan the **Top of Decoding Area** barcode. (See the “**Specify Decoding Area**” section in Chapter 4)
4. Scan the numeric barcodes “2” and “0”.
5. Scan the **Save** barcode.
6. Scan the **Bottom of Decoding Area** barcode.
7. Scan the numeric barcodes “8” and “0”.
8. Scan the **Save** barcode.
9. Scan the **Left of Decoding Area** barcode.
10. Scan the numeric barcodes “2” and “0”.
11. Scan the **Save** barcode.
12. Scan the **Right of Decoding Area** barcode.
13. Scan the numeric barcodes “8” and “0”.
14. Scan the **Save** barcode.
15. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

h. Program the Custom Prefix/Suffix

Example: Set the custom prefix to “CODE”

1. Check the hex values of “CODE” in the ASCII Table. (“CODE”: 43, 4F, 44, 45)
2. Scan the **Enter Setup** barcode.
3. Scan the **Set Custom Prefix** barcode. (See the “**Set Custom Prefix**” section in Chapter 6)
4. Scan the numeric barcodes “4”, “3”, “4”, “F”, “4”, “4”, “4” and “5”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

i. Program the Terminating Character Suffix

Example: Set the terminating character suffix to 0x0D

1. Scan the **Enter Setup** barcode.
2. Scan the **Set Terminating Character Suffix** barcode. (See the “**Set Terminating Character Suffix**” section in Chapter 6)
3. Scan the numeric barcodes “0” and “D”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

j. Program the Code ID

Example: Set the Code ID of PDF 417 to “p”

1. Check the hex value of “p” in the ASCII Table. (“p”: 70)
2. Scan the **Enter Setup** barcode.
3. Scan the **Modify PDF417 Code ID** barcode. (See the “**Modify Code ID**” section in Chapter 6)
4. Scan the numeric barcodes “7” and “0”.
5. Scan the **Save** barcode.
6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

k. Program the NGR Message

Example: Set the NGR message to “!ERR”

1. Check the hex values of “!ERR” in the ASCII Table. (“!ERR”: 21, 45, 52, 52)
 2. Scan the **Enter Setup** barcode.
 3. Scan the **Edit NGR Message** barcode. (See the “**Edit NGR Message**” section in Chapter 5)
 4. Scan the numeric barcodes “2”, “1”, “4”, “5”, “5”, “2”, “5” and “2”.
 5. Scan the **Save** barcode.
 6. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

I. Program the Code Page

Example: Set the code page to Windows 1251 (Cyrillic)

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Code Page** barcode. (See the “**Code Page**” section in Chapter 2)
3. Scan the numeric barcode “1”.
4. Scan the **Save** barcode.
5. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

m. Program the Length Range (Maximum/Minimum Lengths) for a Symbology

Note: If minimum length is set to be greater than maximum length, the engine only decodes barcodes with either the minimum or maximum length. If you only want to read barcodes with a specific length, set both minimum and maximum lengths to be that desired length.

Example: Set the engine to decode Code 128 barcodes containing between 8 and 12 characters

1. Scan the **Enter Setup** barcode.
 2. Scan the **Set the Minimum Length** barcode. (See the “**Set Length Range for Code 128**” section in Chapter 7)
 3. Scan the numeric barcode “8”.
 4. Scan the **Save** barcode.
 5. Scan the **Set the Maximum Length** barcode. (See the “**Set Length Range for Code 128**” section in Chapter 7)
 6. Scan the numeric barcodes “1” and “2”.
 7. Scan the **Save** barcode.
 8. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

n. Program the Custom Inter-keystroke Delay

Example: Set the inter-keystroke delay to 5ms

1. Scan the **Enter Setup** barcode.
2. Scan the **Custom Delay** barcode. (See the “**Inter-Keystroke Delay**” section in Chapter 2)
3. Scan the numeric barcodes “0” and “5”.
4. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

o. Program the engine to get proper output for Russian encoded with Windows 1251

1. Scan the **Enter Setup** barcode.
2. Scan the **Set the Code Page** barcode from the “**Code Page**” section in Chapter 2.
3. Scan the numeric barcode “1” from Appendix 6.
4. Scan the **Save** barcode from Appendix 7.
5. Scan the appropriate **Default Character Encoding** barcode according to the symbology your application needs from the “**Character Encoding**” section in Chapter 8.
6. Scan the **Mode 3** barcode from the “**Emulate ALT+Keypad**” section in Chapter 2.
7. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)

p. Program the engine to get proper output for Russian encoded with UTF-8

1. Scan the **Enter Setup** barcode.
 2. Scan the **Set the Code Page** barcode from the “**Code Page**” section in Chapter 2.
 3. Scan the numeric barcode “1” from Appendix 6.
 4. Scan the **Save** barcode from Appendix 7.
 5. Scan the appropriate **UTF-8** barcode according to the symbology your application needs from the “**Character Encoding**” section in Chapter 8.
 6. Scan the **Mode 3** barcode from the “**Emulate ALT+Keypad**” section in Chapter 2.
 7. Scan the **Exit Setup** barcode. (If you still need to program other parameter/feature, skip this step.)
-

Appendix 6: Digit Barcodes

0-9



A-F



A



B



C



D



E



F

Appendix 7: Save/Cancel Barcodes

After reading numeric barcode(s), you need to scan the **Save** barcode to save the data. If you scan the wrong digit(s), you can either scan the **Cancel** barcode and then start the configuration all over again, or scan the **Delete the Last Digit** barcode and then the correct digit, or scan the **Delete All Digits** barcode and then the digits you want.

For instance, after reading the **Maximum Length** barcode and numeric barcodes “1”, “2” and “3”, you scan:

- **Delete the Last Digit:** The last digit “3” will be removed.
- **Delete All Digits:** All digits “123” will be removed.
- **Cancel:** The maximum length configuration will be cancelled. And the engine is still in the setup mode.



0000160

Save



0000170

Delete the Last Digit



0000180

Delete All Digits



0000190

Cancel

Appendix 8: ASCII Function Key Mapping Table

ASCII Function	ASCII Value (HEX)	No Function Key Mapping	Function Key Mapping
NUL (Null char.)	00	Null	Ctrl+2
SOH (Start of Header)	01	Keypad Enter	Ctrl+A
STX (Start of Text)	02	Caps Lock	Ctrl+B
ETX (End of Text)	03	Null	Ctrl+C
EOT (End of Transmission)	04	Null	Ctrl+D
ENQ (Enquiry)	05	Null	Ctrl+E
ACK (Acknowledgment)	06	Null	Ctrl+F
BEL (Bell)	07	Enter	Ctrl+G
BS (Backspace)	08	Left Arrow	Ctrl+H
HT (Horizontal Tab)	09	Horizontal Tab	Ctrl+I
LF (Line Feed)	0A	Down Arrow	Ctrl+J
VT (Vertical Tab)	0B	Vertical Tab	Ctrl+K
FF (Form Feed)	0C	Delete	Ctrl+L
CR (Carriage Return)	0D	Enter	Ctrl+M
SO (Shift Out)	0E	Insert	Ctrl+N
SI (Shift In)	0F	Esc	Ctrl+O
DLE (Data Link Escape)	10	F11	Ctrl+P
DC1 (XON) (Device Control 1)	11	Home	Ctrl+Q
DC2 (Device Control 2)	12	Print Screen	Ctrl+R
DC3 (XOFF) (Device Control 3)	13	Backspace	Ctrl+S
DC4 (Device Control 4)	14	tab+shift	Ctrl+T
NAK (Negative Acknowledgment)	15	F12	Ctrl+U
SYN (Synchronous Idle)	16	F1	Ctrl+V
ETB (End of Trans. Block)	17	F2	Ctrl+W
CAN (Cancel)	18	F3	Ctrl+X
EM (End of Medium)	19	F4	Ctrl+Y
SUB (Substitute)	1A	F5	Ctrl+Z
ESC (Escape)	1B	F6	See the following table
FS (File Separator)	1C	F7	
GS (Group Separator)	1D	F8	
RS (Request to Send)	1E	F9	
US (Unit Separator)	1F	F10	

ASCII Function Key Mapping Table (Continued)

The function key mappings of the last five characters in the previous table differ from one keyboard layout to another.

Country/ Keyboard Layout	Function Key Mapping				
	1B	1C	1D	1E	1F
United States	Ctrl+[	Ctrl+\	Ctrl+]	Ctrl+6	Ctrl+-
Belgium	Ctrl+[	Ctrl+<	Ctrl+]	Ctrl+6	Ctrl+-
Scandinavia	Ctrl+8	Ctrl+<	Ctrl+9	Ctrl+6	Ctrl+-
France	Ctrl+^	Ctrl+8	Ctrl+\$	Ctrl+6	Ctrl+=
Germany		Ctrl+Ã	Ctrl++	Ctrl+6	Ctrl+-
Italy		Ctrl+\	Ctrl++	Ctrl+6	Ctrl+-
Switzerland		Ctrl+<	Ctrl+.	Ctrl+6	Ctrl+-
United Kingdom	Ctrl+[	Ctrl+ ¢	Ctrl+]	Ctrl+6	Ctrl+-
Denmark	Ctrl+8	Ctrl+\	Ctrl+9	Ctrl+6	Ctrl+-
Norway	Ctrl+8	Ctrl+\	Ctrl+9	Ctrl+6	Ctrl+-
Spain	Ctrl+[	Ctrl+\	Ctrl+]	Ctrl+6	Ctrl+-

Appendix 9: Code Pages List

Numeric Barcode Needed	Code Page
0	Windows 1252 (Latin I)
1	Windows 1251 (Cyrillic)
11	Windows 874 (Thai)

