



2.4GHz Wireless Desktop Keyboard & Mouse Combo



Model: WKB-1320CB Series

QuickGuide

www.adesso.com English

LIMITED WARRANTY

Adesso provides a one year limited warranty for all of its products against defects in material and workmanship.

During this period, Adesso will repair or replace any product which proves to be defective. However, Adesso will not warranty any product which has been subject to improper freight handling, shipping abuse, neglect, improper installation or unauthorized repair. The warranty will not cover products installed with components not approved by Adesso and products where the sealed assembly trace has been broken.

If you discover a defect, Adesso will, at its option, repair or replace the product at no charge to you provided you return it during the warranty period with freight charges pre-paid to Adesso. Before returning any product, you must obtain a Return Merchandise Authorization number (RMA). This RMA # must be clearly marked on the outside of the package you are returning for warranty service. Be certain to also include your name, shipping address (no PO Boxes), telephone number, and a copy of the invoice showing proof of purchase in the package.

SUPPORT

FAQ's <http://www.adesso.com/faqs>
Email Support: support@adesso.com

Telephone Support:
Toll Free: (800) 795-6788
9:00AM to 5:00PM PST Monday - Friday

OTHER LANGUAGE



INTRODUCTION

The Adesso 2.4 GHz Wireless Desktop Keyboard & Mouse Combo offer users two superb input devices with a wireless range up to 30 feet. The wireless keyboard features 14 hotkeys for quick access to your media player controls, email, Internet browser and other common applications like My Computer, Mail and Calculator. The keyboard uses quite membrane key switches that provide a more quiet and tactile response. The wireless mouse is equipped with an optical infrared sensor that is more sensitive and accurate than a traditional optical mouse. This combo is ideal for use in your office or home.

 
SPECIFICATIONS

- Keyboard & Mouse Wireless Technology: 2.4GHz RF Wireless Technology
- Keyboard & Mouse Working Range: Up to 30 feet (10m)
- Keyboard & Mouse Battery Type: (2) AAA Batteries per device
- Keyboard Layout: 104-Key US
- Key Type: Membrane
- Keyboard Hotkeys: 14 Hotkeys (Internet, Windows and Multimedia)
- Keyboard Indicators: Battery Low
- Keyboard Dimensions: 17.7 x 6.6 x 0.8" (450x 167 x 21 mm)
- Mouse Tracking Method: Optical Sensor
- Mouse DPI Resolution: 1000
- Mouse Dimensions: 4.2 x 2.5 x 1.5" (105 x 64 x 38 mm)


REQUIREMENTS

- Operating System: Windows® 8/ 7/ Vista/ XP/ 2000
- Connectivity: USB for Wireless Receiver


CONTENTS

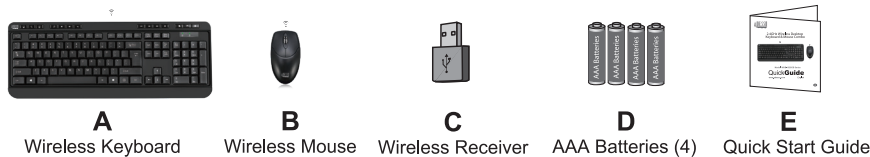

KEYBOARD DESCRIPTION

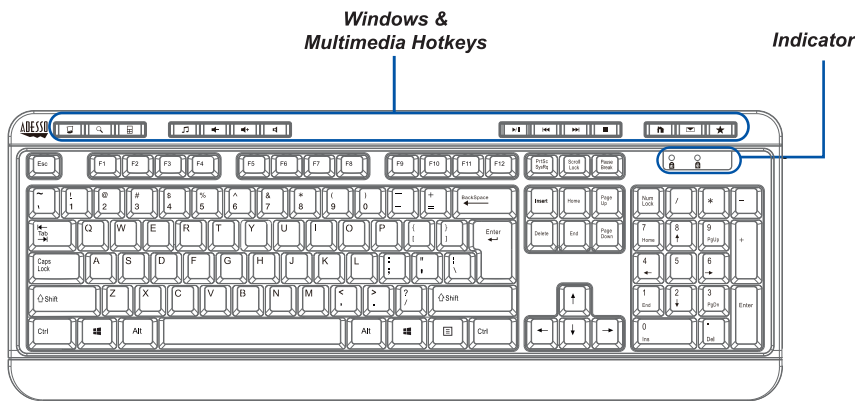 


MOUSE DESCRIPTION

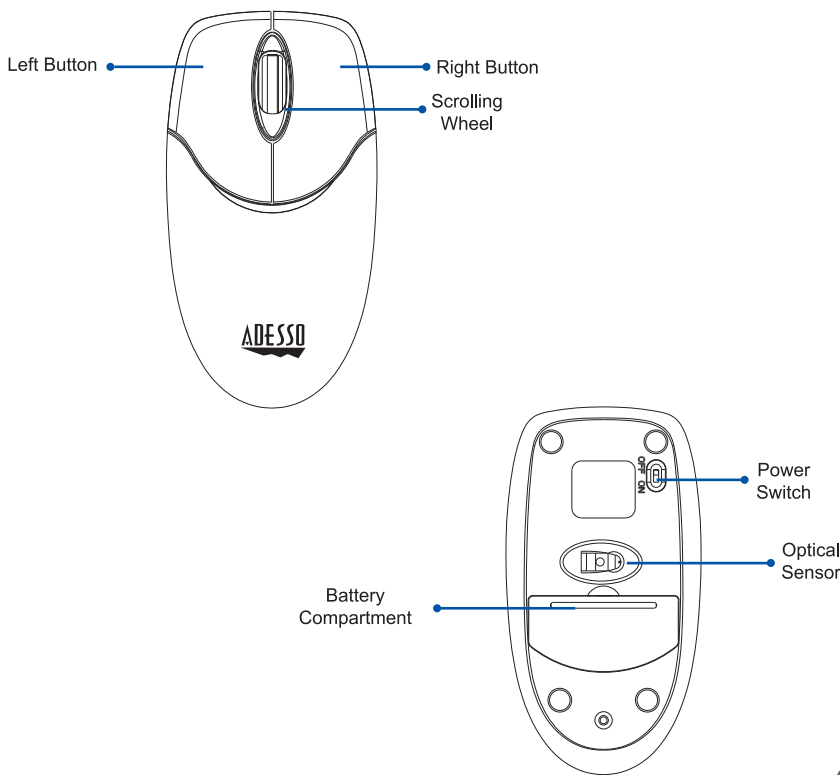 


INSTALLATION

 1. Remove battery cover from mouse and keyboard battery compartment and insert (2) AAA batteries into each device. Then close the battery compartment cover and turn the power switch for the mouse to **ON**.

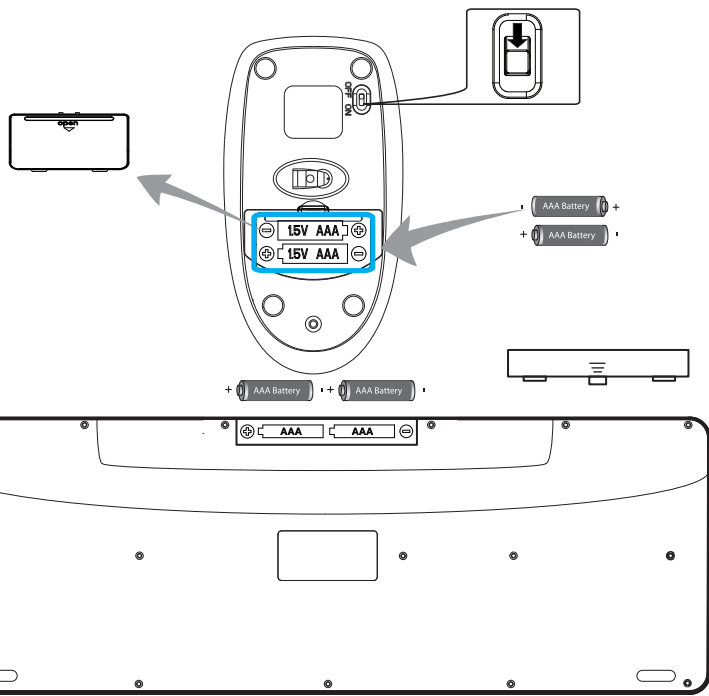

 2. Turn ON your computer and let Windows load completely.
3. Plug the USB Wireless Receiver into the USB port of your computer

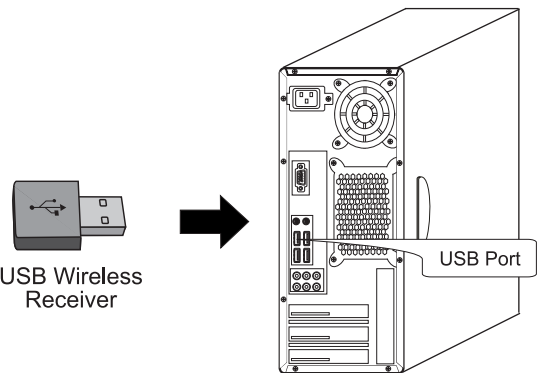

4. Receiver will automatically connect with wireless keyboard and mouse. Now, they are ready to be used.

NOTE:

Windows will detect the driver automatically. No driver required.

TIPS:

- When the Battery Low LED is ON, it means that the device requires to change the batteries.

TROUBLESHOOTING

If wireless keyboard/ mouse cannot be operated, please try the following:

1. Make sure you have inserted two AAA batteries inside the battery compartment correctly. Switch the mouse to ON.
2. Make sure you have connected the USB receiver correctly to the computer's USB port. Move the devices 1 foot away from the receiver in order to avoid interference while pairing connection.
3. Wireless phone, routers and other devices that uses 2.4GHz frequenc might cause interference with wireless keyboard and mouse. Please relocate such wireless appliances away from the wireless keyboard and mouse.

HOTKEYS

Windows Hotkeys	
	Launches My Computer
	Launches computer search function
	Launches Windows's Calculator application
	Launches default Internet browser with homepage
	Launches default email application
	Opens favorite website list stored in Internet browser
Multimedia Hotkeys	
	Launches default media player application
	Decreases computer main volume
	Increases computer main volume
	Mutes computer main volume
	Plays or pauses track in multimedia software
	Takes you to previous track in multimedia software
	Takes you to next track in multimedia software
	Stops track from playing in multimedia software