



CyberTouch™ 7000

Bluetooth Scissor Switch Mini Keyboard



Model: WKB-7000BB

QuickGuide

English

www.adesso.com

CONTENTS



A
WKB-7000

 


B
TYPE-C USB Cable




C
Quick Start Guide

KEYBOARD DESCRIPTION

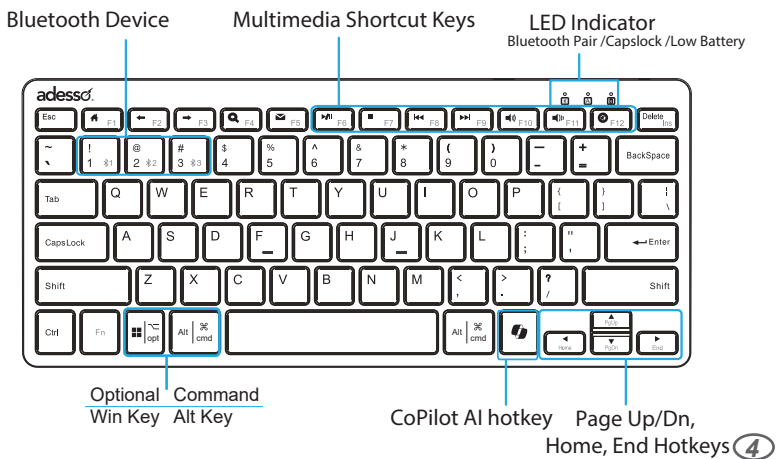

3. Pairing method:

 - Press Fn+1 to select Bluetooth device 1 and hold on 3 seconds, the indicator will blinks.
- Open the computer Bluetooth device windows, search for the Bluetooth device "Adesso WKB-7000",and connect.
- The computer prompts that the connection is successful, the keyboard is ready to be used.



4. Indicator LED:

- Power-on and sleep wake-up prompts: indicator flashes (the number of times is the same as that of the corresponding Bluetooth device).
- Low voltage prompt: slow flashing prompt.
- C. Prompt for pairing and mode switching:refer to the description of 2 and 3.

LIMITED WARRANTY

Adesso provides a one year limited warranty for all of its products against defects in material and workmanship.

During this period, Adesso will repair or replace any product which proves to be defective. However, Adesso will not warranty any product which has been subject to improper freight handling, shipping abuse, neglect, improper installation or unauthorized repair. The warranty will not cover products installed with components not approved by Adesso and products where the sealed assembly trace has been broken.

 
If you discover a defect, Adesso will, at its option, repair or replace the product at no charge to you provided you return it during the warranty period with freight charges pre-paid to Adesso. Before returning any product, you must obtain a Return Merchandise Authorization number (RMA). This RMA # must be clearly marked on the outside of the package you are returning for warranty service. Be certain to also include your name, shipping address (no PO Boxes), telephone number, and a copy of the invoice showing proof of purchase in the package.

SUPPORT

We have listed most of our FAQ's (Frequently Asked Questions) at: <http://www.adesso.com/faqs.asp>. Please visit our FAQ Service & Support pages before you contact our E-mail or Telephone Support.


Email Support: If our FAQ's do not help you resolve your issues, please email support@adesso.com.

Telephone Support:
Toll Free: (800) 795-6788
9:00AM to 5:00PM PST Monday - Friday

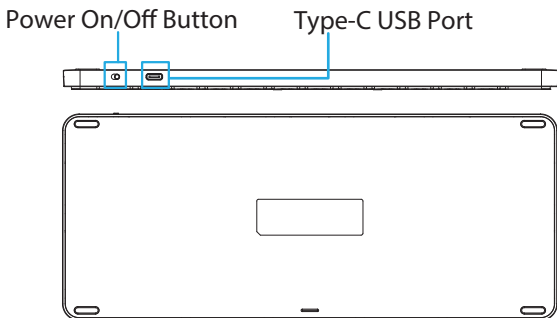

CHARGING THE BATTERY

 - Insert the Type-C USB Charging Cable Connector into the Type-C USB charging port at top of the keyboard.
- Insert the USB end of the Type-C USB Cable into the USB port of your computer or any USB power adaptor.

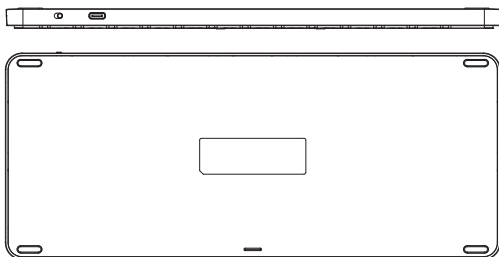

NOTE

- The keyboard goes to sleep mode after 10 minutes of inactivity. If leaving your keyboard for more than an hour, keyboard Power Switch should be set to OFF to save battery life.

TROUBLESHOOTING

If your keyboard does not work after installation, please try the following:

- Make sure you have turned the Power Switch to ON on the side of the keyboard.
- Make sure you have set up Bluetooth connection correctly on your Tablet or PC as instructed on Bluetooth Connection Setup.
- Make sure that the keyboard is within range of your tablet or PC. Maximum keyboard Bluetooth range is 30 feet.
- Make sure your operating system is Windows 8 and above.

INTRODUCTION

Adesso® CyberTouch™ WKB-7000BB Bluetooth® Wireless Mini Keyboard is ideal for the home, office, or while on the go. Its thin design fits well in any workplace. This keyboard features multi-functional hotkeys which can quickly access media player, multimedia controls, and Internet browser commands. It is designed with a slim and low-profile Scissor-Switch Technology for comfort, speed, and a better tactile feel. This keyboard also has a built-in Li-ion Polymer Rechargeable Battery which can be recharged via USB cable for long extended use.

FEATURES

- Keyboard Layout: 78-Key US layout
- Connection: Bluetooth 5.2 multi channel
- Working Range: 30 feet (10m)
- Battery: Built-in Polymer (Rechargeable)
- Battery Life: Up to 100 hours (continuous use)/Up to 30 days (standby mode)
- Hotkeys: 13 Hotkeys (CoPilot, Home,Back, Forward, Search, Email, Play/Pause,Stop, Previous Track, Next Track,Volume Down, Up & Mute)
- Keyboard Dimensions: 11.2 x 4.8 x 0.50" (284.6 x 122.6 x 12 mm)
- Keyboard & Case Weight: 0.62 Lbs (280g)

 
REQUIREMENTS

- Platform: Windows® 8 and Bluetooth® enabled devices. Mac os 10.4 and above
- Connectivity Technology: Bluetooth 5.2

Bluetooth Connection Setup

You must have Bluetooth compability installed on your PC.

- Turn ON your computer and let your OS load completely.
- Bluetooth Device Switching: Click the Mode button.

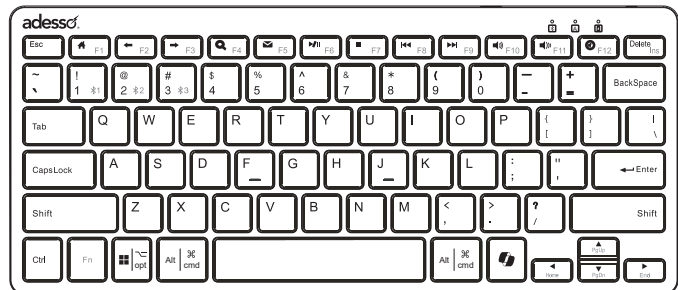

- Press Fn+1 to select bluetooth device 1. Press Fn+1 and hold on 3 seconds for bluetooth device 1 pairing.
- Press Fn+2 to select bluetooth device 2. Press Fn+2 and hold on 3 seconds for bluetooth device 2 pairing.
- Press Fn+3 to select bluetooth device 3. Press Fn+3 and hold on 3 seconds for bluetooth device 3 pairing.

HOTKEYS

Multimedia Hotkeys	
	Launches CoPilot
	Home
	Backward
	Forward
	Search
	Email
	Play / Pause
	Stop
	Previous Track
	Next Track
	Volume Down
	Volume UP
	Mute