



EasyTouch™ 139EB

EasyTouch 2X Large Print Illuminated LED Keyboard



 
Model: AKB-139EB

QuickGuide

English

www.adesso.com

CONTENT

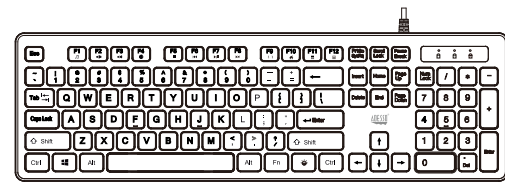

AKB-139EB



Quickstart Guide

DESCRIPTION



LIMITED WARRANTY

Adesso provides a one year limited warranty for all of its products against defects in material and workmanship.

During this period, Adesso will repair or replace any product which proves to be defective. However, Adesso will not warranty any product which has been subject to improper freight handling, shipping abuse, neglect, improper installation or unauthorized repair. The warranty will not cover products installed with components not approved by Adesso and products where the sealed assembly trace has been broken.

If you discover a defect, Adesso will, at its option, repair or replace the product at no charge to you provided you return it during the warranty period with freight charges pre-paid to Adesso. Before returning any product, you must obtain a Return Merchandise Authorization number (RMA). This RMA # must be clearly marked on the outside of the package you are returning for warranty service. Be certain to also include your name, shipping address (no PO Boxes), telephone number, and a copy of the invoice showing proof of purchase in the package.

SUPPORT

FAQ: <http://www.adesso.com/faqs>.

Email Support: support@adesso.com

Telephone Support:
Toll Free: (800) 795-6788
9:00AM to 5:00PM PST Monday - Friday

MORE LANGUAGE



INTRODUCTION

The Adesso® AKB-139EB is a multimedia illuminated LED keyboard. With its large 2X large print on bright keys, you can type out anything from a simple Email to finishing your next novel with greater ease and less strain on your eyes. The chockey switches are low profile provide a quiet and quick response and stand up to heavy use– up to 5 million keystrokes!

SPECIFICATION

Key Layout:	104-key US Layout
Key Type:	Choc Keycaps
Connection:	USB
Cable Length:	6 ft (1.8m)
Indicators:	NumLock, CapsLock, & Scroll Lock
Multimedia Hotkeys:	8 (Player, Volume down/up, mute, play/pause, stop, previous/next track)
Internet Hotkeys:	4 (email, home, Lock/Unlock, calculator)
Dimensions:	17.3" x 5.2" x 1.1" (440x 132 x 27 mm)
Weight:	1.17 lb (533g)

REQUIREMENTS


Operating System: Windows® 10 / 8 / 7
Connectivity Interface: USB Port

HOTKEY DEFINITION


Key	Action	Key Combination	Description
🎵	Player	FN + F1	Turn on your player
🔊	Volume Down	FN + F2	Decreases computer main volume
🔊	Volume Up	FN + F3	Increases computer main volume
🔇	Mute	FN + F4	Mutes computer main volume
⏹	Stop	FN + F5	Stops track from playing in multimedia software
⏮	Previous Track	FN + F6	Takes you to previous track in multimedia software
⏸	Play/Pause	FN + F7	Play or pauses track in multimedia software
⏭	Next Track	FN + F8	Takes you to next track in multimedia software
✉	Email	FN + F9	Launches default email application
🏠	Home	FN + F10	Accesses home page
🔒	Lock/UnLock	FN + F11	Lock or UnLock Keyboard function
🧮	Calculator	FN + F12	Turn on calculator
	Function shift	FN + W	"W", "A", "S", "D" & "↑", "↓", "←", "→" function shift
	Change Lighting	☀	Turn On/Off Backlight
		FN + ☀	Toggle between breathing light
		FN + Page Up	Brightness +
		FN + Page Down	Brightness -

INSTALLATION

 
1. Make sure your computer is OFF before installing the keyboard.

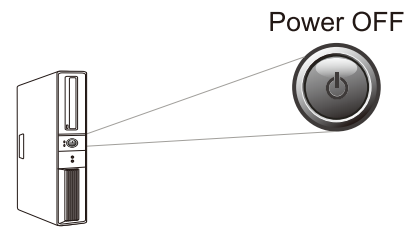

 2. Plug the USB cable of your keyboard into the USB port of your computer.

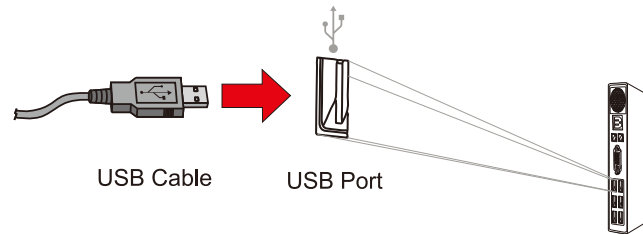

 3. Turn ON your computer and the keyboard will automatically be recognized by your computer.

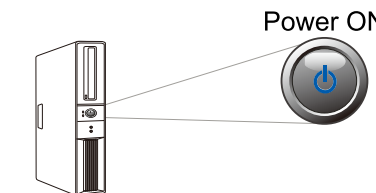

Windows will detect the driver for each device automatically. No driver required.