



10" x 6" Slim Widescreen Graphic Tablet



Model: CyberTablet™ T12

QuickGuide

English

www.adesso.com

①

PACKAGE CONTENTS



Adesso Cybertablet T12

A



Digital Pen

B



Pen Holder

C



Pen Tips & Tweezers

D



 
AAA Battery

E



Quick Guide

F



Driver CD

G



 
USB Cable

H


④

HARDWARE INSTALLATION


1. Make sure your computer is turned on and its operating system is loaded completely before plugging in the Cybertablet T12.

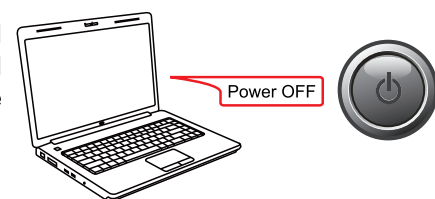

 2. With the included USB port, plug the smaller end into the tablet's USB interface (located on the left side of the tablet) and the other end into your computer's USB port.

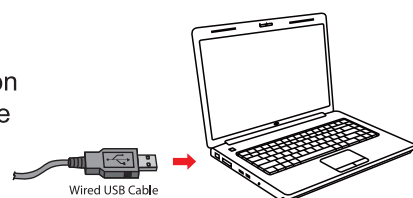

 3. Your operating system will detect the Cybertablet T12 automatically. Proceed to Driver & Software Installation.

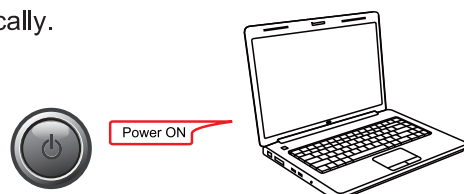

⑦

LIMITED WARRANTY

ADESSO provides one year limited warranty for the quality of all its products in materials and workmanship.

During this period, ADESSO will repair or replace all merchandise, which proved to be defective. However, ADESSO will not warranty any product which has been subjected to improper freight Handling, shipping abuse, neglect or unauthorized repair or installation. The warranty also will not cover products installed with Non-ADESSO components and product with broken sealed and assembly trace. After replacement of RMA, ADESSO reserves the right to request the total cost of the replacement products with broken seals or assembly trace.

If you discover a defect, Adesso will, at its option, repair or replace the product at no charge to you, provided you return it during the warranty period with transportation charges pre-paid to Adesso. You must contact Adesso at support@adesso.com for a Return Merchandise Authorization number (RMA) prior to returning any product. For each product returned for warranty service, please include your name, shipping address (no P.O. Box), telephone number, copy of the bill of sale as proof of purchase and have the package clearly marked with your RMA number.

SUPPORT

 
 
We have listed most of our FAQ's (Frequently Asked Questions) at: <http://www.adesso.com/faqs.asp>. Please visit our FAQ Service & Support pages before you contact our E-mail or Telephone Support.

Email Support: If our FAQ's do not help you resolve your issues, please email support@adesso.com

Telephone Support:
Toll Free: (800) 795-6788
9:00AM to 5:00PM PST Monday - Friday

②

DESCRIPTION

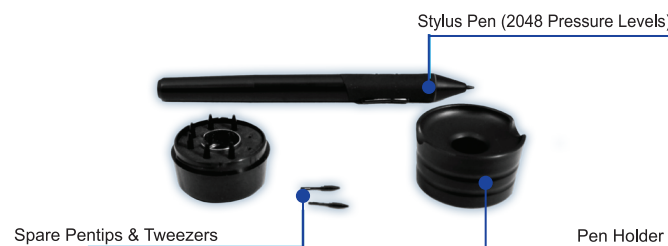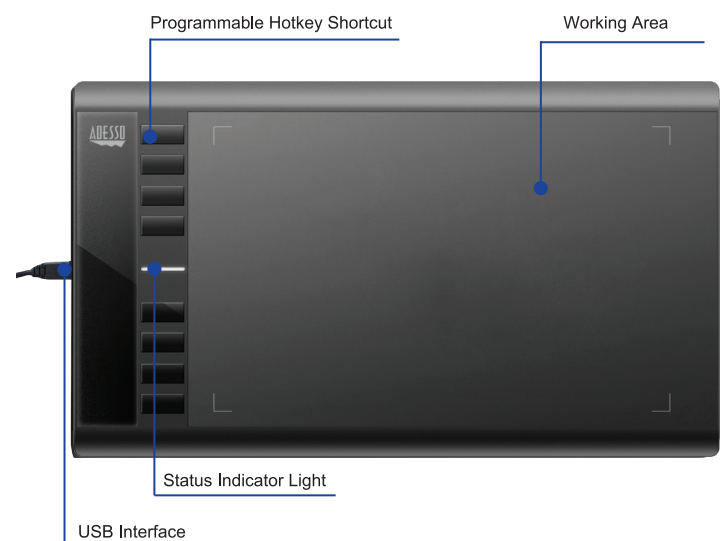

⑤

DRIVER INSTALLATION FOR WINDOWS 8/7/XP...

1. Insert the CyberTablet Driver CD into your computer's CD-ROM drive for installation. If the software installer menu does not automatically run, please double click on the install icon and follow the prompts to connect your CyberTablet and install the CyberTablet T12 driver.
2. Click the "Driver Setup" and follow the on screen procedure to complete installation. After the driver is installed, click OK and restart your computer.



NOTE

1. If you have used Graphic Tablets in the past make sure you completely remove their drivers and restart your system before installing the CyberTablet T12 driver. The driver is needed for advanced controls and functions, however, you can still use basic tablet functions without installing the CyberTablet T12 driver.
2. For the complete and detailed User Manual on driver settings for the tablet and pen, please download from the link below. This will answer all your questions in regards to pen pressure, customizing hot key buttons and navigating through the driver's menu.
http://www.adesso.com/productmanuals/CybertabletT12_User_Manual.zip

⑧

INTRODUCTION

Perfect for art, business, presentations, and projects, Adesso CyberTablet T12 is an advanced graphic tablet that offers both PC and Mac users superior cursor control, greater productivity and higher efficiency. CyberTablet T12 features 2048 levels of pressure sensitivity to imitate the subtleties of a brush stroke and other writing tools, while its eight programmable hot keys provide various shortcuts to commonly used computer tasks. Plus, the 10" X 6" widescreen drawing area allows increased precision and detail. This high quality graphic tablet is ideal for document annotation, free hand illustrations, graphic design, whiteboard presentations, or generally more precise cursor control. The CyberTablet T12 also includes bundled software so you can draw, edit photos, annotate and mark up documents using MS Office, create digital signatures, and create handwritten emails. Work like a pro and discover all the benefits the CyberTablet T12 has to offer!

FEATURES

- Selectable Writing Area: 10" x 6" Widescreen
- Hardware Resolution: 5080 LPI (Lines Per Inch)
- Report Rate: 230 RPS
- Pen Pressure: 2048 Levels of Sensitivity
- Accuracy: +/- 0.01"
- Programmable Hot Keys: 8 Hot Keys
- LED Indicator: Blue LED
- Interface: USB
- USB Cable Length: 5ft. (1.5m)
- Dimensions: 4" x 8.25" x 0.25" (356 x 210 x 7 mm)

REQUIREMENTS


- Operating system: Windows® 8, 7, Vista, XP & Mac OS X 10.4 and above
- Available USB Port

③

SETTING UP YOUR TABLET PEN


1. Battery Installation

- A. Twist the Pen tip barrel
- B. Remove the cap and insert the battery as shown. (Use AAA Battery)
- C. Return the cap and pen barrel

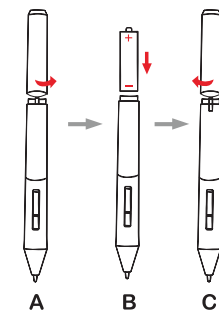

2. Changing the pen tip

- A. Grab the Pen Holder and twist it about 75 degrees counter clockwise. This will remove the top portion of the pen holder and you will then access the additional pen tips and tweezers as shown.
- B. Remove the tweezers located in the middle of the compartment and take out a pen tip so you can be ready to replace the worn tip in the pen. With the tweezers, simply pull out the worn pen tip and insert the new pen tip to the pen.

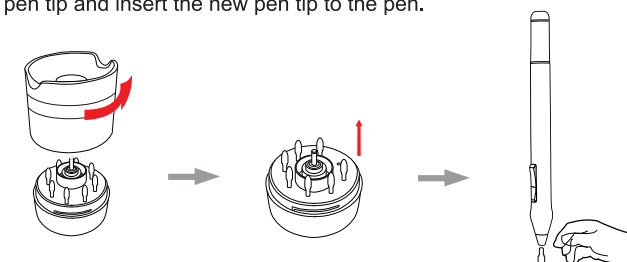


Storing the Digital Pen properly

it is recommended to place the pen in a pen holder or store it with the pen tip pointing upward, or place it horizontally with the pen tip free of any other objects.


⑥

DRIVER INSTALLATION FOR MAC OSX...

1. Insert the CyberTablet Driver CD into your computer's CD-ROM drive for installation. You will see an icon on your Mac's desktop called "Install." Double click on this icon to manually start the install process.

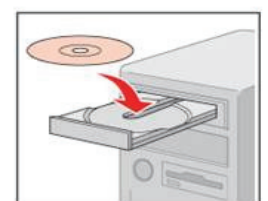

2. Once you click on the "Install" icon you will get a Window that will open on your Mac's desktop. It will contain various folders related to the driver and Windows and Mac Operating Systems. Please double click on the "Mac Driver Folder" and this will open up the actual driver. Proceed to double click on the "OSX Pen Tablet Driver" and then click on the "Pen Tablet Setup" icon

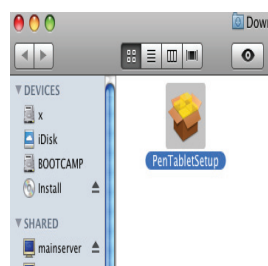

NOTE

1. If you have used Graphic Tablets in the past make sure you completely remove their drivers and restart your system before installing the CyberTablet T12 driver. The driver is needed for advanced controls and functions, however, you can still use basic tablet functions without installing the CyberTablet T12 driver.
2. For the complete and detailed User Manual on driver settings for the tablet and pen, please download from the link below. This will answer all your questions in regards to pen pressure, customizing hot key buttons and navigating through the driver's menu.
http://www.adesso.com/productmanuals/CybertabletT12_User_Manual.zip

⑨