ADESSO®

EasyTouch™ 445

Multi-OS Desktop Keyboard with Touchpad

Model: AKB-445UB

Quick**Guide**

English

www.adesso.com

①

SUPPORT

We have listed most of our FAQ's (Frequently Asked Questions) at: http://www.adesso.com/faqs.asp. Please visit our FAQ Service & Support pages before you contact our E-mail or Telephone Support.

Email Support: If our FAQ's do not help you resolve your issues, please email support@adesso.com

Telephone Support:
Toll Free: (800) 795-6788
9:00AM to 5:00PM PST Monday - Friday

②

INTRODUCTION

The Adesso® AKB-445UB Multi-OS Desktop Keyboard features an integrated toucpad with GlidePoint touchpad technology. The touchpad can take the place of your mouse, making it easier to control the movement of the cursor in your personal computer. The low profile quiet membrane key switch features a five lifecycle and is designed with a silicone rubber material for a faster and quieter typing experience.

FEATURES

• Keyboard Layout:	104-Key US layout
• Key type	Membrane
• Connection:	USB
• Hotkeys:	21 Hotkeys (Home, Favorite, Back, Forward, Refresh, Search, Stop, Email, Player, Play/Pause, Stop, Previous&Next Track, My computer, Volume Down, Up & Mute , Calculator, Power, Sleep, Wake up)
• Cable Length:	6 feet (1.8m)
• Keyboard Dimensions:	17.6 x 6.3 x 1" (448 x 160 x 25 mm)
Touchpad area	2.5 x 1.5"
• Keyboard Weight:	1 Lbs (510g)

REQUIREMENTS

• Platform: Windows® 8 and above.
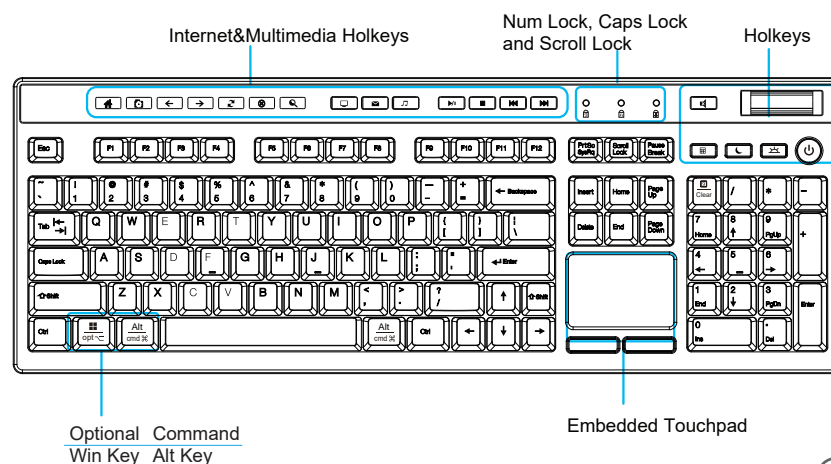　　　　　　Mac os 10.4 and above
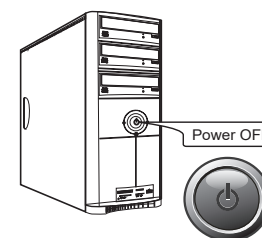• Connnectivity Technology: USB port

③

CONTENTS

AKB-445UB Keyboard

Quick Start Guide

DESCRIPTION

Internet&Multimedia Holkeys

Num Lock, Caps Lock and Scroll Lock

Holkeys

Optional Win Key

Command Alt Key

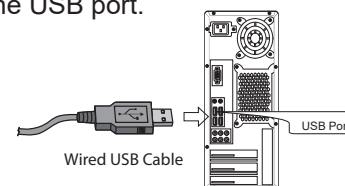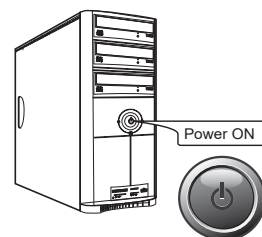Embedded Touchpad

④

INSTALLATION

1. Make sure that your computer is turned OFF before installing this keyboard.

Power OFF

2. **FOR USB CONNECTION:** Plug in the USB cable to the USB port.

Wired USB Cable

USB Port

3. Turn On your computer; operating system will detect the device automatically, no driver required.

Power ON

⑤

HOTKEYS

Key	Action	Description
🏠	Home	Accesses Homepage
←	Back	Back to the previously viewed webpage
→	Forward	Go to the next viewed webpage
⟳	Refresh	Refreshes Internet browser webpage
🔍	Search	Launches Search Bar
✳	Favorites	Launches saved favorite list in default Internet browser
▶/❙❙	Play/Pause	Plays or pauses track in multimedia software
■	Stop	Stops track from playing in multimedia software
◄◄	Previous Track	Takes you to previous track in multimedia software
►►	Next Track	Takes you to next track in multimedia software
◄)	Volume Down	Decreases computer's main volume
◄))	Volume Up	Increases computer's main volume
◄✕	Mute	Mutes computer's main volume
☾	Sleep	Sets computer to sleep mode
☼	Wake Up	Wakes computer up
⏻	Power Off	Shuts down computer
▦	Calculator	Launches Calculator
🖵	My Computer	Launches My Computer menu
♫	Music	Launches default media player application
✉	Email	Launches default email application

⑥