ADESSO®

iMouse P10
Air Mouse

QuickGuide
English

www.adesso.com

Limited Warranty

ADESSO provides one year limited warranty for the quality of all its products in materials and workmanship.

During this period, ADESSO will repair or replace all merchandise, which proved to be defective. However, ADESSO will not warranty any product which has been subjected to improper freight Handling, shipping abuse, neglect or unauthorized repair or installation. The warranty also will not cover products installed with Non-ADESSO components and product with broken sealed and assembly trace. After replacement of RMA, ADESSO reserves the right to request the total cost of the replacement products with broken seals or assembly trace.

If you discover a defect, Adesso will, at its option, repair or replace the product at no charge to you, provided you return it during the warranty period with transportation charges pre-paid to Adesso. You must contact Adesso at support@adesso.com for a Return Merchandise Authorization number (RMA) prior to returning any product. For each product returned for warranty service, please include your name, shipping address (no P.O. Box), telephone number, copy of the bill of sale as proof of purchase and have the package clearly marked with your RMA number.
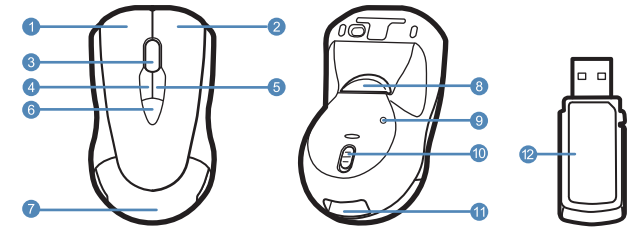
SUPPORT

FAQ's: http://www.adesso.com/faqs

Email Support: support@adesso.com

Telephone Support:
Toll Free: (800) 795-6788
9:00AM to 5:00PM PST Monday - Friday
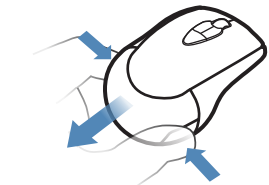
MORE LANGUAGES

Overview

A: Mouse Mode
1. Left Mouse Button
2. Right Mouse Button
3. Scroll Wheel
4. Backward Button
5. Forward Button
6. DPI Button
7. Battery Compartment Cover
8. Non-Function
9. Mouse Connect Button
10. ON/OFF Switch
11. USB Receiver Storage
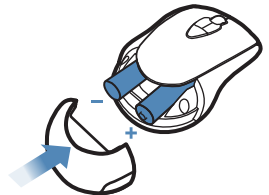12. 2.4 GHz USB Receiver

B: Presenter Mode
1. Left Mouse Button
2. Right Mouse Button
3. Scroll Wheel
4. Page Up
5. Page Down
6. Gesture Button
7. Battery Compartment Cover
8. In-Air Activation Trigger
9. Mouse Connect Button
10. ON/OFF Switch
11. USB Receiver Storage
12. 2.4 GHz USB Receiver

Getting Started

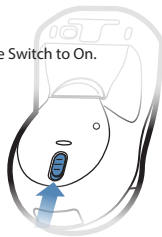**1** Remove Battery Compartment Cover.

2 Insert 2 AAA Batteries as shown

3 Replace Battery Compartment Cover

4 Slide Switch to On.

5 Insert the USB receiver into an available USB port on your computer.
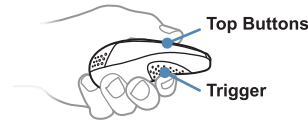

In-Air Operation

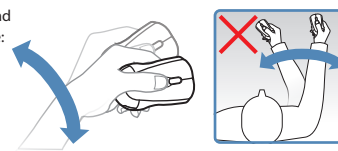**6** Press the connect button on the Mouse.

7 The computer will automatically detect and configure the Air Mouse.

8 If you are using WINDOWS, please download the MotionTools software from our website: www.adesso.com/download, and install.

9 Hold the mouse using a comfortable handshake position. Use your index finger to access the in-air activation trigger and your thumb to access the top mouse buttons.
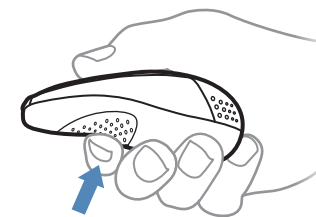
Top Buttons

Trigger

10 Press and hold the in-air activation trigger and move the cursor by flexing only your wrist while keeping your arm and body stationary.
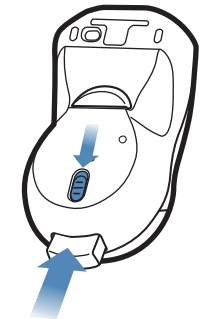

Storing the Air Mouse

11 Tip: Click and hold the in-air activation trigger then move the cursor over a target and release the trigger before clicking. This parks the cursor over the target and allows you to click more accurately.

12 Double-clicking the in-air activation trigger puts the Air Mouse in motion mode where you can move the cursor without the trigger.

13 Slide switch to Off.

14 Insert the USB Receiver into the USB storage compartment. Push gently until it clicks in place. Push gently again to release.